



INTERNATIONAL TELECOMMUNICATION UNION

ITU-T

TELECOMMUNICATION
STANDARDIZATION SECTOR
OF ITU

V.42

(03/2002)

SERIES V: DATA COMMUNICATION OVER THE
TELEPHONE NETWORK

Error control

**Error-correcting procedures for DCEs using
asynchronous-to-synchronous conversion**

ITU-T Recommendation V.42

ITU-T V-SERIES RECOMMENDATIONS
DATA COMMUNICATION OVER THE TELEPHONE NETWORK

General	V.1–V.9
Interfaces and voiceband modems	V.10–V.34
Wideband modems	V.35–V.39
Error control	V.40–V.49
Transmission quality and maintenance	V.50–V.59
Simultaneous transmission of data and other signals	V.60–V.99
Interworking with other networks	V.100–V.199
Interface layer specifications for data communication	V.200–V.249
Control procedures	V.250–V.299
Modems on digital circuits	V.300–V.399

For further details, please refer to the list of ITU-T Recommendations.

ITU-T Recommendation V.42

Error-correcting procedures for DCEs using asynchronous-to-synchronous conversion

Summary

This Recommendation describes error-correcting protocols for use with V-series duplex DCEs to accept start-stop data from the DTE and transmit in synchronous mode. This Recommendation contains an HDLC-based protocol referred to as the Link Access Procedure for Modems (LAPM). This revised version of the Recommendation adds the capability for suspension and resumption of error correction in support of the V.92 modem-on-hold feature. The negotiation parameters for V.44 data compression are added for reference. This revision also gives guidance on the use of answerer detection patterns in a new Appendix VI. Annex A and Appendix V of the previous versions are now deleted in the 2002 revision. The remaining annex and appendixes have not been renumbered.

Source

ITU-T Recommendation V.42 was revised by ITU-T Study Group 16 (2001-2004) and approved under the WTSA Resolution 1 procedure on 29 March 2002.

FOREWORD

The International Telecommunication Union (ITU) is the United Nations specialized agency in the field of telecommunications. The ITU Telecommunication Standardization Sector (ITU-T) is a permanent organ of ITU. ITU-T is responsible for studying technical, operating and tariff questions and issuing Recommendations on them with a view to standardizing telecommunications on a worldwide basis.

The World Telecommunication Standardization Assembly (WTSA), which meets every four years, establishes the topics for study by the ITU-T study groups which, in turn, produce Recommendations on these topics.

The approval of ITU-T Recommendations is covered by the procedure laid down in WTSA Resolution 1.

In some areas of information technology which fall within ITU-T's purview, the necessary standards are prepared on a collaborative basis with ISO and IEC.

NOTE

In this Recommendation, the expression "Administration" is used for conciseness to indicate both a telecommunication administration and a recognized operating agency.

INTELLECTUAL PROPERTY RIGHTS

ITU draws attention to the possibility that the practice or implementation of this Recommendation may involve the use of a claimed Intellectual Property Right. ITU takes no position concerning the evidence, validity or applicability of claimed Intellectual Property Rights, whether asserted by ITU members or others outside of the Recommendation development process.

As of the date of approval of this Recommendation, ITU had not received notice of intellectual property, protected by patents, which may be required to implement this Recommendation. However, implementors are cautioned that this may not represent the latest information and are therefore strongly urged to consult the TSB patent database.

© ITU 2002

All rights reserved. No part of this publication may be reproduced, by any means whatsoever, without the prior written permission of ITU.

CONTENTS

Page

1	Scope	1
1.1	General	1
1.2	Relationship to other international standards	1
1.3	References	2
2	Definitions	2
3	Abbreviations.....	3
4	Establishing an error-corrected connection	4
5	Interchange circuits affected by error correction.....	4
6	Overview of error-correcting DCE operation.....	5
6.1	General	5
6.2	Overview of the control function	6
6.3	Overview of the error control function.....	6
6.4	Communication between the control function and the error control function.....	7
7	Operation of the control function	7
7.1	Physical handshake.....	8
7.2	Phases of error-correcting protocol establishment	8
7.2.1	Detection phase	8
7.2.2	Protocol establishment phase	10
7.3	Data transfer	10
7.3.1	Flow control across the DTE/DCE interface.....	11
7.4	Transfer of break signal.....	11
7.5	Receipt of break.....	12
7.6	Negotiation/Indication of parameter values and optional procedures.....	13
7.7	Orderly release of the error-corrected connection.....	13
7.8	Loop-back test	14
7.9	Operation of the DTE-DCE interface after failure to establish error- correcting operation.....	14
7.10	Suspension of error correction procedure.....	15
7.10.1	Reception of L-SUSPEND request primitive during the detection phase.....	15
7.10.2	Reception of L-SUSPEND request primitive during the protocol establishment phase or after an error correction connection has been established	15
7.11	Resumption of error correction procedure	15

8	Operation of the error control function: LAPM procedures.....	15
8.1	General	16
8.1.1	Frame structure and fields	16
8.1.2	Format conventions	17
8.1.3	Invalid frames	19
8.1.4	Frame abort.....	19
8.1.5	Interframe time fill	19
8.2	LAPM elements of procedures and field formats.....	19
8.2.1	Address field format	19
8.2.2	Control field format	20
8.2.3	Control field parameters and associated state variables	21
8.2.4	Frame types	22
8.2.5	Use of timers.....	28
8.3	Establishment of the error-corrected connection.....	28
8.3.1	General	28
8.3.2	Detailed procedures	29
8.4	Transfer of user data from the V.24 interface	30
8.4.1	Transmitting I frames	30
8.4.2	Receiving I frames.....	30
8.4.3	Sending and receiving acknowledgements.....	31
8.4.4	Receiving REJ frames	32
8.4.5	Receiving SREJ frames	33
8.4.6	Receiving RNR frames.....	34
8.4.7	Own-receiver busy condition	35
8.4.8	Waiting acknowledgement	36
8.4.9	Termination of the error-corrected connection.....	36
8.5	Exception condition reporting and recovery	37
8.5.1	N(S) sequence error	37
8.5.2	N(R) sequence error	38
8.5.3	Timer-recovery condition.....	38
8.5.4	Invalid-frame condition	38
8.5.5	Frame-rejection condition	38
8.5.6	Receipt of an FRMR response frame	39
8.5.7	Unsolicited response frames.....	39
8.6	Transfer of user-control information	39
8.7	Orderly release of an error-corrected connection.....	39
8.7.1	General	39
8.7.2	Release procedure.....	39
8.7.3	Procedure on expiry of timer T401	40

	Page
8.8	Disconnected state 40
8.9	Collision of unnumbered commands and responses 40
8.9.1	Identical transmitted and received set-mode commands 40
8.9.2	Different transmitted and received set-mode commands 40
8.9.3	Unsolicited DM response and SABME or DISC command 40
8.10	Negotiation/indication of parameter values and optional procedures 41
8.10.1	General 41
8.10.2	Negotiation/Indication procedure 41
8.10.3	Procedure on expiry of timer T401 41
8.11	Loop-back test 42
8.12	Monitoring functions 42
8.12.1	General 42
8.12.2	Supervision during the connected state 42
8.12.3	Connection verification procedures 42
8.13	Transfer of break 43
8.13.1	General 43
8.13.2	State variables and parameters 43
8.13.3	Break procedures 44
9	System parameters 45
9.1	Parameters of the control function 45
9.1.1	Detection phase timer (T400) 45
9.2	Parameters of the error control function 45
9.2.1	Acknowledgement timer (T401) 45
9.2.2	Maximum number of retransmissions (N400) 45
9.2.3	Maximum number of octets in an information field (N401) 45
9.2.4	Window size (<i>k</i>) 46
9.2.5	Reply delay timer (T402) – Optional 46
9.2.6	Inactivity timer (T403) – Optional 46
9.2.7	DLCI values 46
9.3	Other parameters 46
10	Negotiation of optional procedures 47
11	Control function-to-control function connection 47
12	Encoding of information fields 47
12.1	Information fields in I frames 47
12.2	Information fields in XID frames 47
12.2.1	General 47
12.2.2	Encoding for negotiation/indication of parameter values and optional procedures 48

	Page
12.3 Information fields in UI frames	52
12.3.1 Encoding of BRK message.....	52
12.3.2 Encoding of BRKACK message	53
12.4 Information fields in TEST frame	53
12.5 Information fields in SREJ frames	53
Annex A – Operation of the error control function – Alternative procedure	53
Annex B – Mapping of character formats to 8-bit format	54
Appendix I – Interworking with a non-error correcting DCE	54
I.1 Interworking with a non-error-correcting answerer	54
I.2 Interworking with a non-error-correcting originator	55
I.3 Disposition of unrecognized bits	55
Appendix II – Data forwarding conditions	55
Appendix III – Additional information for V.42 implementers regarding robustness of operation	56
III.1 Transmission of the answerer detection pattern	56
III.2 Value of parameter N400 (maximum number of retransmissions)	57
III.3 Incomplete XID exchange	57
III.4 Selective retransmission	57
III.5 Reject on detection of errored frames	57
III.6 Checkpointing.....	57
Appendix IV – Factors for determining the acknowledgement timer	58
Appendix V – Potential enhancements to LAPM protocol.....	58
Appendix VI – Additional information for V.42 implementers regarding answerer detection patterns	59
VI.1 Alternative answerer detection patterns	59
VI.2 Skipping of originator/answerer detection patterns.....	59

ITU-T Recommendation V.42

Error-correcting procedures for DCEs using asynchronous-to-synchronous conversion

The ITU-T,

considering

- (a) that the use of high-speed DCEs for transmission of asynchronous data on the GSTN is increasing;
- (b) that there is a demand for an improved error performance on such connections by the use of an error-correcting protocol;
- (c) that there is a need to interwork with DCEs not providing such a protocol,

declares

that the error-correcting procedures to be followed by DCEs using asynchronous-to-synchronous conversion are as specified in this Recommendation.

1 Scope

1.1 General

This Recommendation describes error-correcting protocols for use with V-series duplex DCEs to accept start-stop data from the DTE and transmit in synchronous mode. Use in half-duplex DCEs is for further study.

This Recommendation contains an HDLC-based protocol referred to as the Link Access Procedure for Modems (LAPM).

The principal characteristics of the protocols are as follows:

- a) interworking in the non-error-correcting mode with V-series DCEs that include asynchronous-to-synchronous conversion according to ITU-T Rec. V.14;
- b) error detection through the use of a cyclic redundancy check;
- c) error correction through the use of automatic retransmission of data;
- d) synchronous transmission through the conversion of start-stop data;
- e) an initial handshake in start-stop format which minimizes disruption to the DTEs.

NOTE – Technical changes have been introduced since the 1988 version of this Recommendation, which make refinements to the operation of the LAPM protocol. The following clauses were affected: 7.2.1.3, 7.3, 7.4, 7.5, 7.9, 8.3, 8.4, 8.5, 8.13, 9.3, 10, 12.2.2, 12.3, A.7.2.1. Implementations conforming to the 1988 version remain fully compatible and conformant with this version.

1.2 Relationship to other international standards

The error-correcting protocol defined in the main body of this Recommendation can be specified in terms of the High-level Data Link Control (HDLC) formats and procedures. In particular, it makes use of the balanced asynchronous class (BAC) of HDLC procedures. The basic mode (i.e. without options) of this protocol makes use of HDLC "optional functions" 1, 2, 4, 6, 8 and 10. (This mode is identical to ITU-T Recs Q.920/Q.921.) When using optional procedures of this error-correcting protocol, HDLC "optional functions" 3 (for selective retransmission), 12 (for loop-back test), and 14 (for 32-bit FCS) are added.

1.3 References

The following ITU-T Recommendations and other references contain provisions, which, through reference in this text, constitute provisions of this Recommendation. At the time of publication, the editions indicated were valid. All Recommendations and other references are subject to revision: users of this Recommendation are therefore encouraged to investigate the possibility of applying the most recent edition of the Recommendations and other references listed below. A list of the currently valid ITU-T Recommendations is regularly published.

- [1] ITU-T Recommendation Q.920 (1993), *ISDN user-network interface data link layer – General aspects*.
- [2] ITU-T Recommendation Q.921 (1997), *ISDN user-network interface – Data link layer specification*.
- [3] ITU-T Recommendation V.14 (1993), *Transmission of start-stop characters over synchronous bearer channels*.
- [4] ITU-T Recommendation V.24 (2000), *List of definitions for interchange circuits between data terminal equipment (DTE) and data circuit-terminating equipment (DCE)*.
- [5] ITU-T Recommendation X.3 (2000), *Packet Assembly/Disassembly facility (PAD) in a public data network*.
- [6] ISO/IEC 3309:1993, *Information technology – Telecommunications and information exchange between systems – High-level data link control (HDLC) procedures – Frame structure*.
- [7] ISO/IEC 4335:1993, *Information technology – Telecommunications and information exchange between systems – High-level data link control (HDLC) procedures – Elements of procedures*.
- [8] ISO/IEC 7809:1993, *Information technology – Telecommunications and information exchange between systems – High-level data link control (HDLC) procedures – Classes of procedures*.
- [9] ISO/IEC 8885:1993, *Information technology – Telecommunications and information exchange between systems – High-level data link control (HDLC) procedures – General purpose XID frame information field content and format*.

2 Definitions

An error-correcting protocol may be used with a signal converter to create an error-correcting DCE.

2.1 data circuit-terminating equipment (DCE): In this Recommendation, a DCE, when used without further qualification, consists primarily of three sections: interchange circuits for the interface to the DTE and signal converters for transmission over telephone circuits. A control function is used to provide a user interface to coordinate the operation of the interchange circuits and the signal converter. The structure of a DCE is shown in Figure 1.

- a) The DTE exchanges data with the DCE through a V.24 interface. The data is exchanged in start-stop format.
- b) The signal converter provides the modulation and demodulation of signals exchanged on the GSTN, or two-wire point-to-point leased circuits.
- c) The control function provides overall control and coordination between each of the DCE components. Further, the controller provides the specific operational configuration for the DCE selected by the user. The user interface to the controller is implementation dependent.

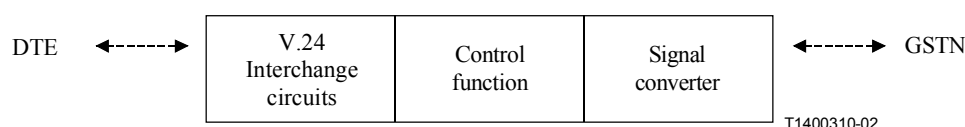


Figure 1/V.42 – DCE

2.2 error-correcting DCE: The logical structure of an error-correcting DCE is shown in Figure 2. The error control functions implement the error-correcting protocols of this Recommendation.

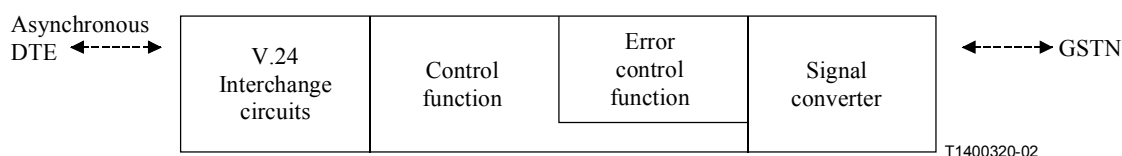


Figure 2/V.42 – Error-correcting DCE

3 Abbreviations

This Recommendation uses the following abbreviations:

ADP	Answerer Detection Pattern
C/R	Command/Response bit
CRC	Cyclic Redundancy Check
DCE	Data Circuit-terminating Equipment
DISC	Disconnect (frame)
DLCI	Data Link Connection Identifier
DM	Disconnected Mode (frame)
DTE	Data Terminal Equipment
FCS	Frame Check Sequence
FI	Format Identifier
FRMR	Frame reject (frame)
GI	Group Identifier
GL	Group Length
GSTN	General Switched Telephone Network
HDLC	High-level Data Link Control (protocol)
I	Information (frame)
LA	Link Acknowledgement (frame of the alternative error-correcting procedure)
LAPM	Link Access Procedure for Modems
LD	Link Disconnect (frame of the alternative error-correcting procedure)
LN	Link attention (frame of the alternative error-correcting procedure)
LNA	Link attention acknowledgement (frame of the alternative error-correcting procedure)
LR	Link Request (frame of the alternative error-correcting procedure)

LT	Link Transfer (frame of the alternative error-correcting procedure)
m-SREJ	Multi-Selective Reject (procedure)
ODP	Originator Detection Pattern
P/F	Poll/Final (bit)
PI	Parameter Identifier
PL	Parameter Length
PV	Parameter Value
REJ	Reject (frame)
RNR	Receive Not Ready (frame)
RR	Receive Ready (frame)
SABME	Set Asynchronous Balanced Mode Extended (frame)
SREJ	Selective Reject (frame)
s-SREJ	Single-Selective Reject (procedure)
UA	Unnumbered Acknowledgement (frame)
XID	Exchange Identification (frame)

4 Establishing an error-corrected connection

A connection over which the DCE's error-correcting protocol operates is established in two phases. Initially, a physical connection is established between the peer signal converters, as specified by the appropriate V-series Recommendations. After the physical connection has been established, the signal converter is in the data mode.

Error-correcting DCEs shall provide a mechanism for enabling or disabling establishment of the error-correcting protocol. This mechanism may be used in situations where the attempt to establish the error-correcting protocol interferes with operation of the remote DTE or when error-correction between DCEs is not desired or needed (such as when the DTEs provide higher-layer error control). The ability to initiate or terminate the error-correction protocol independent of the physical connection (i.e. while a physical connection is already in progress or retained) may optionally be provided, but coordination of protocol initiation at times other than immediately following establishment of the physical connection is not a subject of this Recommendation.

If establishment of the error-correcting protocol is enabled, then after the signal converter is in the data mode, the peer error control functions will establish the error-corrected connection.


5 Interchange circuits affected by error correction

The affected circuits are listed in Table 1.

The interconnection of the functional elements of an error-correcting DCE is shown in Figure 3.

Table 1/V.42 – Interchange circuits affected by error control

No.	Description
103	Transmitted data
104	Received data
106	Ready for sending
109	Data channel received line signal detector
133	Ready for receiving

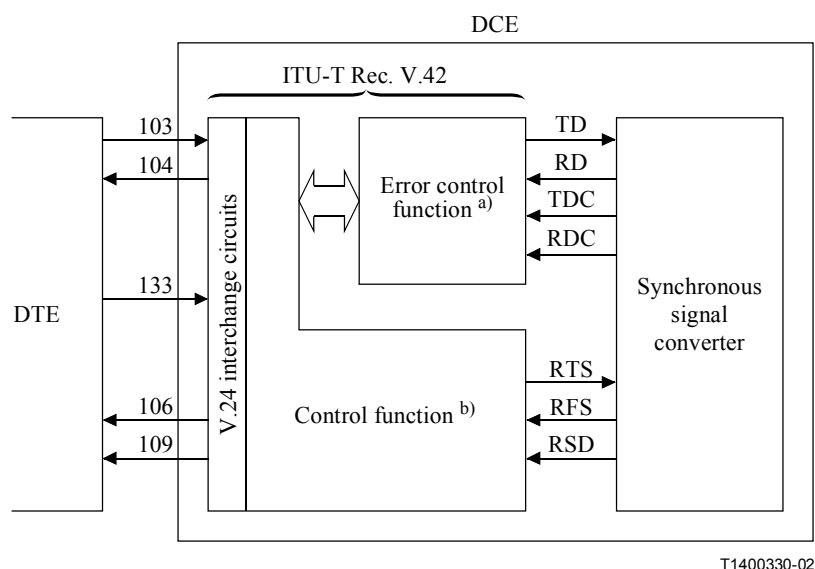

a) See clause 8 and Annex A.

b) See clause 7.

Figure 3/V.42 – Circuits affected by error control

6 Overview of error-correcting DCE operation

6.1 General

An error-correcting DCE, as depicted in Figure 2, contains four components:

- a) V.24 interchange circuits;
- b) a signal converter;
- c) a control function;
- d) an error control function.

While the first three components are also found in the DCE depicted in Figure 1, the control function in an error-correcting DCE is enhanced beyond the functionality of a control function in a DCE. For example, the control function in an error-correcting DCE shall be capable of determining whether the remote DCE is an error-correcting DCE or a non-error-correcting DCE. The error control function is unique to an error-correcting DCE.

Clause 7 provides a detailed description of the control function. Clause 8 provides detailed descriptions of the error-correcting protocols and their interactions with the control function.

NOTE – The decomposition of the functionality of an error-correcting DCE into a control function and an error control function, as well as the description of their interaction, is not meant to imply a particular method of implementation.

The remainder of this clause gives an overview of the control function and the error control function.

6.2 Overview of the control function

The control function shall be responsible for the overall coordination of functions within a DCE. When realized in an error-correcting DCE, the control function shall be responsible for the following additional aspects of operation:

- a) conducting an initial handshake to determine whether the remote DCE is also a V.42 error-correcting DCE;
- b) falling back to a non-error-correcting mode to interwork with V-series DCEs that include asynchronous-to-synchronous conversion according to ITU-T Rec. V.14;
- c) coordinating the negotiation and/or indication of any necessary parameters;
- d) coordinating the negotiation of optional procedures;
- e) coordinating the establishment of an error-corrected connection after the establishment of the physical connection with a peer error-correcting DCE;
- f) coordinating the delivery of data between the V.24 interface and the error control function so that data loss, to the extent possible, does not occur due to congestion on the DTE/DCE or DCE/DCE interface (This includes inspection of the characters received from the V.24 interface to determine whether the DTE has invoked flow control.);
- g) converting data received on the V.24 interface with start-stop framing to a format suitable for synchronous transmission;
- h) converting data received on the DCE/DCE interface in synchronous format for delivery with start-stop framing on the V.24 interface;
- i) processing a break (spacing) signal received on the V.24 interface for synchronous transmission;
- j) processing a break indication received on the DCE/DCE interface;
- k) coordinating a loop-back test;
- l) re-negotiating parameters if conditions warrant it; and
- m) releasing the error-corrected connection in an orderly fashion.

6.3 Overview of the error control function

The error control function shall be responsible for the operation of the protocol that realizes the error-corrected connection. The protocol shall have the following functional capabilities:

- a) negotiation and/or indication of appropriate operational parameters;
- b) negotiation of optional procedures;
- c) establishment of an error-corrected connection;
- d) transmission and reception of data;
- e) error detection and correction;
- f) transmission and reception of a break signal;
- g) initiation of and responding to loop-back testing; and
- h) orderly release of an error-corrected connection.

6.4 Communication between the control function and the error control function

Communication between the control function and error control function is modelled as a set of abstract primitives, which represents the logical exchange of information and control to accomplish a task or service. In the context of this Recommendation, the control function is viewed as the "service-user" while the error control function is viewed as the "service-provider".

A primitive is of the general form:

X-NAME type

where:

X designates a particular pair of communicating entities;

NAME designates the service being invoked;

Type designates the initiator of the communication.

Table 2 shows the services expected by the control function (i.e. the values that "NAME" can take on).

Table 2/V.42 – Services expected by the control function

Service	Primitive	Clause
Establish an error-corrected connection between peer error-correcting entities	L-ESTABLISH	7.2.2
Transfer data	L-DATA	7.3
Release an error-corrected connection	L-RELEASE	7.2.2, 7.7
Transfer a break signal	L-SIGNAL	7.4, 7.5
Negotiate/indicate parameter values and optional procedures	L-SETPARM	7.6
Conduct a loop-back test between error-correcting entities	L-TEST	7.8
Suspend error correction procedure	L-SUSPEND	7.10
Resume error correction procedure	L-RESUME	7.11

There are four "types" of primitives. These are:

- a) a request primitive, which is used by the service-user to request a service;
- b) an indication primitive, which is used by the service-provider to notify the service-user of a request for a service or an action initiated by the service-provider;
- c) a response primitive, which is used by the service-user to respond to a request for a service; and
- d) a confirmation primitive, which is used to indicate that a service request has been completed.

7 Operation of the control function

Clause 6.2 provided an overview of the control function. This clause details the operation of the control function, which completely controls all phases of error control function operation.

7.1 Physical handshake

The procedures for establishing a physical connection are specified by the appropriate V-series Recommendations. After the physical connection has been established, the control function shall be aware of the following information:

- a) whether the DCE is the originating or answering DCE;
- b) various aspects concerning the transmission facility (e.g. speed); and
- c) the character format used by the DTE.

The method for determining the above information is beyond the scope of this Recommendation. This information is used to govern some aspects of error-correcting-DCE operation.

7.2 Phases of error-correcting protocol establishment

Upon receipt of an indication that the signal converter element has completed carrier handshake and that the physical connection is ready for communications, the control function initiates error-correcting protocol operation. This process has been divided into two phases:

- a) the detection phase determines whether the remote DCE is also an error-correcting DCE; and
- b) the protocol establishment phase determines parameter values and optional procedures to be used, as necessary, and establishes the error-corrected connection.

The detection phase has been designed to avoid the potential disruption to the called DTE that could occur if the control function immediately entered the protocol establishment phase and the remote DCE was not an error-correcting DCE. However, the detection phase may optionally be disabled by the user if, for example, the answering DCE is known to be of a compatible type. The error-correcting DCE does not transmit any data received on the V.24 interface to the remote DCE in error-correcting mode until the successful establishment of the error-corrected connection. At that time, the control function adjusts the V.24 interface to inform the DTE that DTE-to-DTE data transfer may commence.

7.2.1 Detection phase

This phase allows the control function to verify the presence of a remote error-correcting DCE.

Considerations for interworking between an error-correcting DCE and a non-error-correcting DCE are given in Appendix I.

7.2.1.1 Determination of role

The success of the detection phase depends on both control functions knowing their roles as originating DCE (hereinafter called the originator) or answering DCE (answerer). The role is determined by the frequencies used for communication or the role assumed during carrier handshake as assigned in the particular modulation Recommendations. In the situation where no phone call is placed (such as in a "leased line" connection) or where, because of the nature of the modulation, there is no clear differentiation between originator and answerer, the roles must be determined by parameterization (stopping options or other user indication of desired role to the control function).

7.2.1.2 Originator actions

The detection phase actions by the originator may be disabled by the user. In this case, the originator moves directly to the protocol establishment phase (see 7.2.2).

If the detection phase is enabled, when circuits RFS and RSD go ON, indicating a successful connection between the signal converters, the originator shall then send the Originator Detection Pattern (ODP). The ODP is defined as the following pattern of bits (listed left to right in order of transmission):

0 1000 1000 1 11...11 0 1000 1001 1 11...11

This pattern represents DC1 with even parity, followed by 8 to 16 ones, followed by DC1 with odd parity, followed by 8 to 16 ones. The ODP is transmitted for the period of the detection phase timer, T400 (see 9.1.1) or until the Answerer Detection Pattern (ADP), which is defined in 7.2.1.3, is received.

All transmissions are sent using the scrambling function of the signal converter (if any) and in synchronization with the derived carrier clock signal (i.e. without use of any inherent asynchronous speed-matching capability of the signal converter that would otherwise be used in an asynchronous non-error-correcting DCE).

The originator shall examine the incoming bit stream from the receiver signal element for the presence of the ADP. Correct receipt of the characters from at least two adjacent ADPs shall be required for the originator to determine that the pattern is being observed.

If the ADP is not observed within the period of T400 (see 9.1.1), following completion of the transmission of the last repetition of the ODP the originator shall decide that the answerer does not possess V.42 error-correcting capability. In this case, the originator may fall back to non-error-correcting mode or may attempt to detect the presence of an alternative error-correcting capability.

If the ADP is observed within the period of T400, the originator stops transmission of the ODP and takes the appropriate action based upon the ADP received (e.g. if "EC" is received, initiate LAPM).

7.2.1.3 Answerer actions

Upon indication of successful establishment of a connection between the signal converters, the control function of the answerer shall transmit 1-bits (mark) until termination of the detection phase, receipt of the ODP, or detection of the start of the protocol phase (the start of the protocol phase is indicated by receipt of continuous flags, or of an LAPM or alternative procedure protocol frame).

The answerer shall examine the incoming bit stream from the signal converter for the presence of the ODP, which is defined in 7.2.1.2. Correct receipt of at least four DC1s of alternating parity shall be required for the answerer to determine that the ODP is being observed.

If, after establishment of the physical connection, the ODP is not observed within the period of T400 (see 9.1.1) and the start of the protocol establishment phase is not observed within the same period, then the answerer shall decide that the originator is not capable of V.42 error-correcting operation and shall fall back to non-error-correcting operation.

If the ODP is observed, the answerer interprets this as an indication from the originator that the originator is capable of error-correcting operation and desires to continue into the protocol establishment phase. The answerer shall immediately send one of the Answerer Detection Patterns (ADPs) defined in Table 3 at least ten times.

All transmissions are sent using the scrambling function of the signal converter and in synchronization with the derived carrier clock signal.

Table 3/V.42 – Answerer detection patterns

Type	Meaning
0 1010 0010 1 11...11 0 1100 0010 1 11...11 (E) and (C) separated by 8 to 16 ones	V.42 supported
0 1010 0010 1 11...11 0 0000 0000 1 11...11 (E) and (Null) separated by 8 to 16 ones	No error-correcting protocol desired
0 1010 0010 1 11...11 0 0000 XXXX 1 11...11	The remaining 15-code points are reserved for future study and assignment
NOTE – The above bit patterns are listed left to right in order of transmission (i.e. low-order bit transmitted first).	

7.2.2 Protocol establishment phase

The protocol establishment phase is initiated by the originating DCE upon successful completion of the detection phase if enabled. The purpose of this phase is to:

- negotiate and/or indicate the parameters and any optional procedures that govern the subsequent operation of the DCE; and
- establish the error-corrected connection.

Negotiation/indication may be omitted if default parameter values and procedures are satisfactory. When needed, the control function shall follow the procedures in 7.6 for the negotiation/indication of parameter values and optional procedures.

After the negotiation/indication process has been completed, the originating DCE initiates establishment of the error-corrected connection. The control function in the originating DCE instructs its error control function to initiate connection establishment by issuing an L-ESTABLISH request primitive.

Upon receiving an L-ESTABLISH indication primitive from its error control function, a control function must determine whether it wishes to accept the request for error-corrected connection establishment. If it wishes to accept the request, it issues an L-ESTABLISH response primitive; data may now be transmitted over the error-corrected connection. Otherwise, the control function issues an L-RELEASE request primitive to the error control function. The control function may fall back to operation in a non-error-control mode or it may release the physical connection.

After having issued an L-ESTABLISH request primitive, the control function, upon receipt of an L-ESTABLISH confirmation primitive, considers the establishment of the error-corrected connection to be completed and may transmit data over it. If the control function receives an L-RELEASE indication primitive (e.g. as a result of a failure to set up the error-corrected connection or the remote control function refusing to accept error-corrected connection setup), then it may fall back to operation in a non-error-correcting mode or it may release the physical connection.

7.3 Data transfer

Upon completion of the protocol establishment phase, the control function shall request transmission by the error control function of data received on the V.24 interface. Regardless of the character format used, each character received on the V.24 interface shall be transmitted as an 8-bit character (without start and stop bits) across the DCE/DCE interface.

Annex B provides the mapping of various character formats to an 8-bit character format.

NOTE – It is beyond the scope of this Recommendation to specify how the control function determines when to request the error control function to transmit data. Some considerations are given in Appendix II.

To transmit data, the control function shall issue an L-DATA request primitive to the error control function. This primitive shall indicate the data to be transmitted.

Upon receipt of an L-DATA indication primitive, the control function shall deliver the received data to the V.24 interface. Each character shall contain the proper start-stop framing.

7.3.1 Flow control across the DTE/DCE interface

The control function will be capable of indicating to the DTE a temporary inability to accept data on circuit 103 (DCE not-ready condition), and of recognizing a corresponding indication from the DTE (DTE not-ready condition). Upon receiving such an indication, the DCE shall and the DTE should complete transmission of any partially transmitted character and then cease transmitting data on circuit 104 (103) and clamp circuit 104 (103) to binary 1. When the not-ready condition is cleared, the DCE (DTE) may resume the transmission of data on circuit 104 (103).

The flow control indication may be performed in one of two ways:

- a) using circuits 133 and 106:
 - a DCE not-ready condition may be indicated by turning circuit 106 OFF and cleared by turning circuit 106 ON;
 - a DTE not-ready condition may be recognized by an ON-to-OFF transition and cleared by an OFF-to-ON transition of circuit 133;
- b) using DC1/DC3 characters (XON/XOFF functions):
 - a DCE not-ready condition may be indicated by transmitting a DC3 character and cleared by transmitting a DC1 character on circuit 104;
 - a DTE not-ready condition may be recognized by the reception of a DC3 character and the condition cleared by the reception of a DC1 character on circuit 103.

Optionally, DC1 and DC3 characters received from the DTE may remain in the data stream.

Both techniques a) and b) shall be provided; however, the choice of technique is a user-configurable option.

The response times to the DCE of indication of a DTE not-ready condition and of the DTE to indication of a DCE not-ready condition are for further study. These times should be kept as short as practical. DCEs should accommodate latency in DTE recognition of the DCE not-ready indication by accepting several characters on circuit 103 after the indication is given.

If a break signal is the next item to be delivered across the DCE/DTE interface, it shall be delivered regardless of the flow control state. In the case of a non-expedited/non-destructive break, data to be delivered prior to the break remains subject to flow control.

7.4 Transfer of break signal

Upon receipt of a break signal on the V.24 interface, the control function shall determine:

- a) how to handle data (discard or deliver) not yet transmitted across the V.24 interface or to the remote DCE; and
- b) in what sequence (in sequence or preceding) the break signal shall be delivered to the remote V.24 interface with respect to data delivery.

The control function shall issue an L-SIGNAL request primitive to the error control function, indicating the break-handling option corresponding to the appropriate actions. The break-handling option and the actions to be followed are given in Table 4. The L-SIGNAL request primitive may also indicate the length of the break. If break lengths are not so indicated, the L-SIGNAL request primitive shall be issued at the earliest opportunity following detection of the break condition on the DTE/DCE interface. If break lengths are being indicated, the L-SIGNAL request primitive shall be issued at the earliest opportunity following the detection of the end of the break condition. Should the break condition continue for more than 2.54 seconds, however, the L-SIGNAL request primitive

indicating a break exceeding 2.54 seconds (break length field value equal to 255) shall be issued at the earliest opportunity following determination that the break has exceeded 2.54 seconds.

Table 4/V.42 – Transmitting DCE actions on receipt of break signal on the V.24 interface

Break handling option	With respect to data			
	Going to remote DCE	Going to local DTE	Coming from remote DCE	Coming from local DTE
Destructive/Expedited ^{a)}	– Complete data transmission in progress, then transmit break – Discard data not yet transmitted	– Discard data not yet delivered	– Discard data until receive acknowledgement	– Hold data until receive acknowledgement
Non-destructive/Expedited	– Complete data transmission in progress, then transmit break – Hold data until receive acknowledgement	– Continue delivering data	– Continue receiving data	– Continue receiving data
Non-destructive/Non-expedited	– Wait for acknowledgement of data previously transmitted, and then transmit break – Hold data until receive acknowledgement	– Continue delivering data	– Continue receiving data	– Continue receiving data
a) All state variables pertaining to control function and error control function operation, except those pertaining to break transfer, are reset to their initial values.				

The control function shall not issue a subsequent L-SIGNAL request primitive before a prior one has been acknowledged by an L-SIGNAL confirmation primitive from the error control function. If Destructive/Expedited or Non-destructive/Expedited breaks are being used, and a subsequent break is detected on the DTE interface prior to receipt of the L-SIGNAL confirmation primitive associated with a previous break, the DCE may discard and ignore the subsequent break. If Non-destructive/Non-expedited breaks are being used, however, subsequent breaks must remain pending and signalled following receipt of the L-SIGNAL confirmation primitive associated with any previous break.

NOTE – Because break signals are not subject to flow control, the buffer capacity of the DCE may be exceeded by the receipt of multiple consecutive breaks, resulting in subsequent breaks being discarded. The maximum number of pending non-expedited non-destructive breaks which can be accommodated is manufacturer-specific.

7.5 Receipt of break

The control function is informed of a break upon receipt of an L-SIGNAL indication primitive. It shall acknowledge this primitive with an L-SIGNAL response primitive as soon as possible. Actions to be taken on receipt of the break depend on the break-handling option, as shown in Table 5. If a break length is not indicated or contains a zero value, a break of default length is delivered to the DTE.

Table 5/V.42 – Receiving DCE actions on receipt of break from the remote DCE

Break handling option	With respect to data	
	Going to remote DCE	Going to local DTE
Destructive/Expedited ^{a) b)}	– Discard data not yet transmitted	– Discard data not yet delivered – Deliver break signal
Destructive/Expedited	– No effect	– Deliver break signal immediately – Resume normal data delivery
Non-destructive/Non-expedited	– No effect	– Deliver break signal in sequence with respect to data
^{a)} All state variables pertaining to control function and error control function operation, except those pertaining to break transfer, are reset to their initial values.		
^{b)} For all break options, acknowledgement should be returned as soon as possible.		

7.6 Negotiation/Indication of parameter values and optional procedures

During the protocol establishment phase (see 7.2.2), negotiation and/or indication of parameter values and optional procedures is initiated by the control function in the originating DCE if default values are not satisfactory. It may also be initiated at any time thereafter by the control function in either DCE.

NOTE 1 – The criteria by which the control function determines to change parameter values and optional procedures, once set during the protocol establishment phase, are beyond the scope of this Recommendation. Examples may include detection of changing transmission-line conditions.

The control function issues an L-SETPARM request primitive to instruct its error control function to initiate negotiation and/or indication of parameter values and optional functions.

Upon receipt of an L-SETPARM indication primitive from its error control function, the control function shall perform the necessary negotiation (see clauses 9 and 10). It shall then issue an L-SETPARM response primitive to its error control function and complete the negotiation/indication process (see below).

Upon receipt of an L-SETPARM confirmation primitive from its error control function, the control function completes the negotiation/indication process (see below).

Negotiation/indication of parameter values and optional procedures follow the procedures in clauses 9 and 10. To complete the negotiation/indication process, the control function shall set the affected parameters to their new values and activate/deactivate the affected procedures.

NOTE 2 – Some parameters are set independently of and without informing the remote DCE. In such cases, the control function sets these parameters to their new values without interacting with the error control function as described above.

7.7 Orderly release of the error-corrected connection

After prior establishment of an error-corrected connection, the control function may instruct its error control function to release the error-corrected connection in an orderly fashion by issuing an L-RELEASE request primitive. At this time, the control function considers the procedure completed. The control function also determines whether to release the physical connection.

NOTE – The stimuli by which the control function orders the error control function to release the error-corrected connection in an orderly fashion are beyond the scope of this Recommendation. The control function may disconnect the physical connection, without requesting an orderly release of the error-corrected connection, upon detection of the corresponding changes on the V.24 interface.

The control function is informed of an orderly release of the error-corrected connection when it receives an L-RELEASE indication primitive from its error control function. The control function may then release the physical connection and effect the corresponding changes on the V.24 interface.

7.8 Loop-back test

As an optional function agreed to during the protocol establishment phase, a control function may initiate a loop-back test with the remote control function.

NOTE – How a control function determines the need to conduct a loop-back test is for further study.

To initiate a loop-back test, the control function shall issue an L-TEST request primitive to its error control function. The control function is responsible for generating unique data to be returned by the remote control function to indicate a successful test.

A loop-back test may be initiated at any time after completion of the protocol establishment phase.

The test is considered terminated on receipt of an L-TEST indication primitive containing the data sent with the L-TEST request primitive or when a locally-defined period of time has expired.

A control function receiving an L-TEST indication primitive without having issued a prior L-TEST request primitive (i.e. it needs to respond to a loop-back test from the remote control function) shall issue an L-TEST request primitive to its error control function. This primitive shall contain the data received in the L-TEST indication primitive to be returned to the test initiator.

7.9 Operation of the DTE-DCE interface after failure to establish error-correcting operation

When failure of the detection phase indicates that the remote DCE does not support V.42 error-correcting operation, and establishment of any alternative error-correcting capability has also failed, the control function shall either disconnect from line, or fall back to non-error-correcting operation and interwork with the remote non-error-correcting DCE according to the procedures specified in ITU-T Rec. V.14. User-configurable options shall be provided to specify:

- a) whether the DCE should disconnect the line or fall back; and
- b) whether, during fallback operation, the DCE should use buffered or unbuffered operation.

The method for setting these options is beyond the scope of this Recommendation.

In unbuffered fallback operation, the DCE operates as specified in ITU-T Rec. V.14. No flow control is used between the local DCE and DTE, and the data rate of the local DTE/DCE V.24 interface shall be set to match the data rate between the DCEs. To avoid data loss and permit correct transfer of data, it is necessary for the DCE to inform the DTE of any change in use of flow control and DTE/DCE data rate, but the mechanism for reporting such changes is beyond the scope of this Recommendation.

In buffered fallback operation, the data rate on the local DTE/DCE V.24 interface remains as it would have been in error-correcting operation; data is buffered in the DCE, and flow control is used, to match the throughput to the DCE/DCE data rate. Break signals shall be transferred in-sequence, non-expedited, and non-destructive with relation to buffered data. The DCE provides an internal function to restore any elements removed from the received datastream by the remote DCE (according to ITU-T Rec. V.14) to accommodate an overspeed condition of the remote DTE. It should be noted that flow control of received data should be used with caution as there is a potential for data loss if the local DTE asserts flow control to stop the delivery of data from the local DCE for an excessive period of time causing the local DCEs receive buffer to overflow.

7.10 Suspension of error correction procedure

The control function may instruct its error control function to suspend the error correction procedure by issuing an L-SUSPEND request primitive. At this time, the control function considers the error control function suspended.

Upon receipt of an L-SUSPEND request primitive from its control function, the error control function shall freeze the appropriate timers (see 7.10.1 and 7.10.2).

NOTE – The L-SUSPEND request primitive is typically used to suspend the error correction procedure during a retrain or the modem on hold procedures defined in ITU-T Rec. V.92.

7.10.1 Reception of L-SUSPEND request primitive during the detection phase

Upon receipt of an L-SUSPEND request primitive during the detection phase, the error control function shall freeze timer T400.

7.10.2 Reception of L-SUSPEND request primitive during the protocol establishment phase or after an error correction connection has been established

Upon receipt of an L-SUSPEND request primitive during the protocol establishment phase or after an error correction connection has been established, the error control function shall freeze timer T401 and, if implemented, timers T402 and T403.

7.11 Resumption of error correction procedure

After prior suspension of the error-correction procedure, the control function may instruct its error control function to resume the error-correction procedure by issuing an L-RESUME request primitive.

Upon receipt of an L-RESUME request primitive from its control function, the error control function shall unfreeze previously frozen timers.

8 Operation of the error control function: LAPM procedures

This clause describes the operation of the error control function.

Within LAPM, all messages are transmitted in frames, which are delimited by opening and closing flags. The frame structure and flag pattern are described in 8.1.1 below.

The procedures in this Recommendation include functions for:

- a) frame delimiting, alignment, and transparency;
- b) transfer of user information (data and break);
- c) sequence control;
- d) detection of transmission, format, and operational errors;
- e) recovery from detected transmission, format, and operational errors with notification of unrecoverable errors;
- f) flow control;
- g) negotiation/indication of parameter values and optional procedures; and
- h) initialization and orderly release of the error-corrected connection.

In addition, LAPM makes provision for one or more "logical" error-corrected connections; discrimination between these connections is by means of a Data Link Connection Identifier (DCLI) contained in each frame.


8.1 General

This clause specifies the frame structure and procedures for the proper operation of the Link Access Procedure for Modems (LAPM).

8.1.1 Frame structure and fields

8.1.1.1 Frame structure

All DCE-to-DCE communications are accomplished using the frame structure shown in Figure 4.

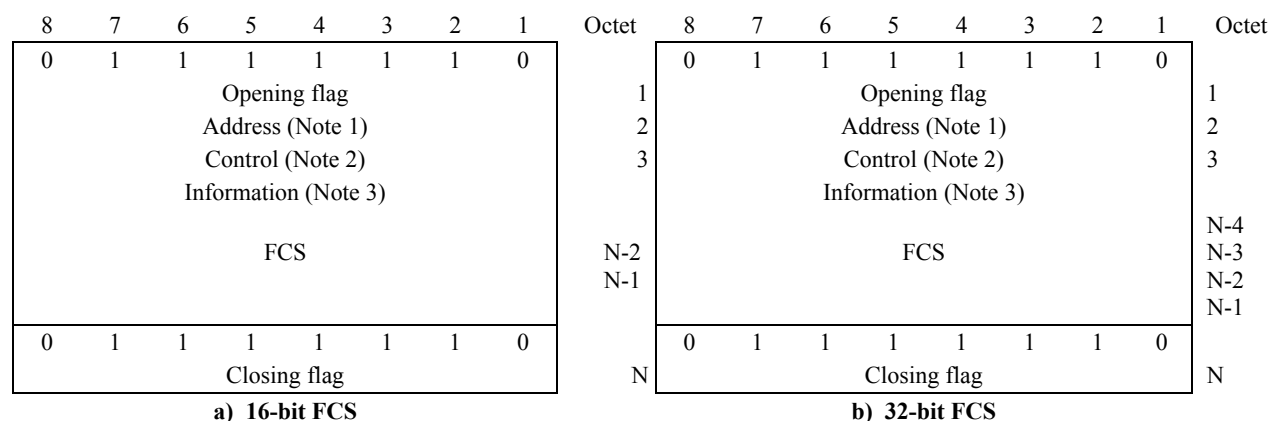

NOTE 1 – The maximum size of this field is limited to two octets.

NOTE 2 – The control field is two octets for frame types with sequence numbers and one octet for frame types without sequence numbers, see 8.2.2.

NOTE 3 – Not all frame types have an information field.

Figure 4/V.42 – Frame structure

8.1.1.2 Flag sequence and transparency

All frames are delimited by the unique bit pattern "01111110", known as a flag. The flag preceding the address field is defined as the opening flag. The flag following the frame check sequence field is defined as the closing flag. The closing flag of one frame may also serve as the opening flag of the next frame.

Transparency is maintained by the transmitters examining the frame content between the opening and closing flags and inserting a "0" bit after all sequences of five contiguous "1" bits. The receiver examines the frame content between the opening and closing flags and discards any "0" bit that directly follows five contiguous "1" bits.

8.1.1.3 Address field

The primary purpose of the address field is to identify an error-corrected connection and the error-correcting entity associated with it. The format of this field is defined in 8.2.1.

8.1.1.4 Control field

The control field is used to distinguish between different frame types. This field is further described in 8.2.2.

8.1.1.5 Information field

Depending on the frame type, an information field may also be present in the frame. The maximum number of octets in this field is governed by parameter N401 (see 9.2.3).

8.1.1.6 Frame Check Sequence (FCS) field

This field uses a CRC polynomial to guard against bit errors.

8.1.1.6.1 16-bit frame Check Sequence

The FCS field shall be the sixteen-bit sequence preceding the closing flag. The 16-bit FCS shall be the ones complement of the sum (modulo 2) of:

- a) the remainder of $x^k (x^{15} + x^{14} + x^{13} + x^{12} + x^{11} + x^{10} + x^9 + x^8 + x^7 + x^6 + x^5 + x^4 + x^3 + x^2 + x^1 + 1)$ divided (modulo 2) by the generator polynomial $x^{16} + x^{12} + x^5 + 1$, where k is the number of bits in the frame existing between, but not including, the final bit of the opening flag and the first bit of the FCS, excluding bits inserted for transparency; and
- b) the remainder of the division (modulo 2) by the generator polynomial $x^{16} + x^{12} + x^5 + 1$, of the product of x^{16} by the content of the frame existing between, but not including, the final bit of the opening flag and the first bit of the FCS, excluding bits inserted for transparency.

As a typical implementation at the transmitter, the initial content of the register of the device computing the remainder of the division is preset to all 1s and is then modified by division by the generator polynomial (as described above) of the address, control and information fields; the ones complement of the resulting remainder is transmitted as the sixteen-bit FCS.

As a typical implementation at the receiver, the initial content of the register of the device computing the remainder is preset to all 1s. The final remainder, after multiplication by x^{16} and then division (modulo 2) by the generator polynomial $x^{16} + x^{12} + x^5 + 1$ of the serial incoming protected bits and the FCS, will be "0001 1101 0000 1111" (x^{15} through x^0 , respectively) in the absence of transmission errors.

8.1.1.6.2 32-bit frame check sequence

The FCS shall be the 32-bit sequence preceding the closing flag. The 32-bit FCS shall be the ones complement of the sum (modulo 2) of:

- a) the remainder of $x^k (x^{31} + x^{30} + x^{29} + x^{28} + x^{27} + x^{26} + x^{25} + x^{24} + x^{23} + x^{22} + x^{21} + x^{20} + x^{19} + x^{18} + x^{17} + x^{16} + x^{15} + x^{14} + x^{13} + x^{12} + x^{11} + x^{10} + x^9 + x^8 + x^7 + x^6 + x^5 + x^4 + x^3 + x^2 + x^1 + 1)$ divided (modulo 2) by the generator polynomial $x^{32} + x^{26} + x^{23} + x^{22} + x^{16} + x^{12} + x^{11} + x^{10} + x^8 + x^7 + x^5 + x^4 + x^2 + x + 1$, where k is the number of bits in the frame existing between, but not including, the final bit of the opening flag and the first bit of the FCS, excluding bits inserted for transparency; and
- b) the remainder of the division (modulo 2) by the generator polynomial $x^{32} + x^{26} + x^{23} + x^{22} + x^{16} + x^{12} + x^{11} + x^{10} + x^8 + x^7 + x^5 + x^4 + x^2 + x + 1$, of the product of x^{32} by the content of the frame existing between, but not including, the final bit of the opening flag and the first bit of the FCS, excluding bits inserted for transparency.

As a typical implementation at the transmitter, the initial content of the register of the device computing the remainder of the division is preset to all 1s and is then modified by division by the generator polynomial (as described above) of the address, control and information fields; the ones complement of the resulting remainder is transmitted as the 32-bit FCS.

As a typical implementation at the receiver, the initial content of the register of the device computing the remainder is preset to all 1s. The final remainder, after multiplication by x^{32} and then division (modulo 2) by the generator polynomial $x^{32} + x^{26} + x^{23} + x^{22} + x^{16} + x^{12} + x^{11} + x^{10} + x^8 + x^7 + x^5 + x^4 + x^2 + x + 1$ of the serial incoming protected bits and the FCS, will be "1100 0111 0000 0100 1101 1101 0111 1011" (x^{31} through x^0 , respectively) in the absence of transmission errors.

8.1.2 Format conventions

8.1.2.1 Numbering convention

The basic convention used in this Recommendation is illustrated in Figure 5. The bits are grouped into octets. The bits of an octet are shown horizontally and are numbered from 1 to 8. Multiple octets are shown vertically and are numbered from 1 to n.

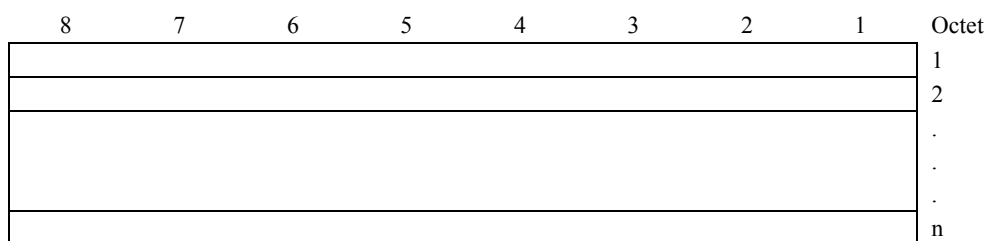


Figure 5/V.42 – Format convention

8.1.2.2 Order of bit transmission

The octets are transmitted in ascending numerical order; inside an octet, bit 1 is the first bit to be transmitted.

8.1.2.3 Field mapping convention

When a field is contained within a single octet, the lowest bit number of the field represents the lowest-order value.

When a field spans more than one octet, the order of bit values within each octet progressively decreases as the octet number increases. The lowest bit number associated with the field represents the lowest-order value.

For example, a bit number can be identified as a couple (ob) where o is the octet number and b is the relative bit number within the octet. Figure 6 illustrates a field that spans from bit (1,3) to bit (2,7). The high-order bit of the field is mapped on bit (1,3) and the low-order bit is mapped on bit (2,7).




Figure 6/V.42 – Field mapping convention

An exception to the preceding field-mapping convention is the FCS field, which spans two or four octets. In this case, bit 1 of the first octet is the high-order bit; bit 8 of the second octet (for 16-bit FCS) or bit 8 of the fourth octet (for 32-bit FCS) is the low-order bit (see Figure 7).

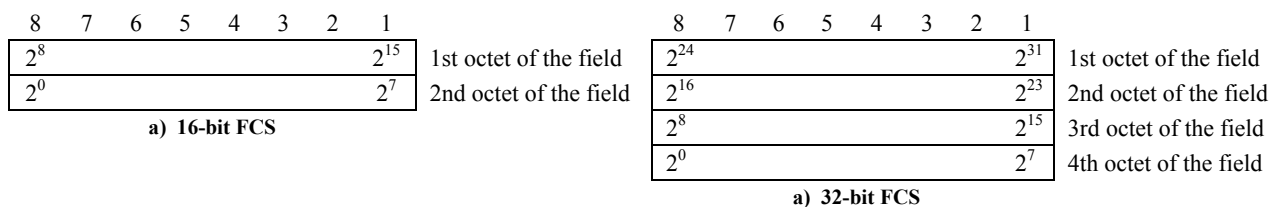


Figure 7/V.42 – FCS mapping convention

8.1.3 Invalid frames

An invalid frame is one which:

- a) is not properly bounded by two flags; or
- b) for 16-bit FCS mode, has fewer than five octets between flags of frames that contain sequence numbers and fewer than four octets between flags of frames that do not contain sequence numbers; or for 32-bit FCS mode, has fewer than seven octets between flags of frames that contain sequence numbers and fewer than six octets between flags of frames that do not contain sequence numbers; or
- c) does not consist of an integral number of octets prior to zero-bit insertion or following zero-bit extraction; or
- d) contains a frame check sequence error; or
- e) contains an address field with more than two octets or with a DLCI value not supported by the receiver.

Invalid frames shall be discarded without notification to the sender (however, see 8.5.4). No action is taken as a result of having received the frame.

8.1.4 Frame abort

Receipt of seven or more contiguous 1 bits shall be interpreted as an abort and the error control function shall ignore the frame currently being received.

8.1.5 Interframe time fill

Interframe time fill is accomplished by transmitting contiguous flags between frames, i.e. multiple eight-bit flag sequences (see 8.1.1.2).

8.2 LAPM elements of procedures and field formats

The elements of procedures define the commands and responses that are used on an LAPM error-corrected connection. Procedures, which are derived from these elements of procedures, are described in subsequent subclauses.

8.2.1 Address field format

The format of the address field is shown in Figure 8. The address field contains the data link connection identifier (DLCI), the C/R bit, and the address field extension (EA) bit.

8	7	6	5	4	3	2	1	Octet
DLCI						C/R	EA	2
DLCI							EA	2A

Figure 8/V.42 – Address field format

8.2.1.1 Data link connection identifier

Within the scope of this Recommendation, two DLCI values are defined. One DLCI value is used to transfer information exchanged between V.24 interfaces. The other value, which is optional, is used as a control function-to-control function information connection; it is described in clause 11. The value for each DLCI is described in 9.2.7.

When using the optional two-octet address field (see 8.2.1.3), the DLCI also includes bits 8 through 2 of octet 2A.

8.2.1.2 Command/response (C/R) bit field

The C/R (command/response) bit identifies the frame as either a command or a response. In conformance with HDLC rules, a command frame contains the "address" of the error-correcting entity to which it is transmitted while a response frame contains the "address" of the error-correcting entity transmitting the frame. For a given error-corrected connection, the DLCI value of the address field remains the same but the C/R bit changes, as shown in Table 6.

Table 6/V.42 – Command/response bit usage

Command/response	Direction		C/R value
Command	Originator	—————→ Answerer	1
	Answerer	—————→ Originator	0
Response	Originator	—————→ Answerer	0
	Answerer	—————→ Originator	1

8.2.1.3 Address field extension (EA) bit

According to the rules of HDLC, the range of the address field may be extended by reserving the first transmitted bit of each octet of this field to indicate whether the octet is the last one of the field. Within the scope of this Recommendation, the address field is limited to a maximum of two octets.

When the EA bit is set to 1 in an octet, it signifies that this octet is the last octet of the address field. When the EA bit is set to 0, it signifies that another octet of the address field follows.

8.2.2 Control field format

The control field identifies the type of frame, which will be a command or response. The control field will contain sequence numbers, where applicable.

Three types of control field formats are specified: numbered information transfer (I format), supervisory functions (S format), and unnumbered information transfers and control functions (U format). The control field formats are shown in Table 7.

Table 7/V.42 – Control field formats

Format	Control field bits (modulo 128)								Octet
	8	7	6	5	4	3	2	1	
I format	N(S)							0	4
	N(R)							P	3
S format	X	X	X	X	S	S	0	1	4
	N(R)							P/F	3
U format	M	M	M	P/F	M	M	1	1	
N(S) Transmitter send sequence number N(R) Transmitter receive sequence number S Supervisory function bits M Modifier function bits P/F Poll bit when issued as a command Final bit when issued as a response X Reserved and set to 0									

8.2.2.1 Information transfer (I) format

The I format shall be used to perform an information transfer between error-correcting entities. The functions of N(S), N(R), and P are independent; that is, each I frame has an N(S) sequence number, an N(R) sequence number that may or may not acknowledge additional I frames received by the error-correcting entity, and a P bit that may be set to 0 or 1.

8.2.2.2 Supervisory (S) format

The S format shall be used to perform supervisory control procedures on the error-corrected connection, such as acknowledge I frames, request retransmission of one or more I frames, and request temporary suspension of transmission of I frames. The functions of N(R) and P/F are independent; that is, each supervisory frame has an N(R) sequence number that may or may not acknowledge additional I frames received by the error-correcting entity, and a P/F bit that may be set to 0 or 1.

8.2.2.3 Unnumbered (U) format

The U format shall be used to provide additional connection control procedures and unnumbered information transfers. The U format does not include sequence numbers but does include a P/F bit that may be set to 0 or 1.

8.2.3 Control field parameters and associated state variables

The various parameters associated with the control field formats are described in this clause. The coding of the bits within these parameters is such that the lowest numbered bit within the parameter field is the least significant bit.

8.2.3.1 Poll/final (P/F) bit

All frames contain the poll/final (P/F) bit. The P/F bit serves a function in both command frames and response frames. In command frames, the P/F bit is referred to as the P bit. In response frames, it is referred to as the F bit. The P bit set to 1 is used by an error-correcting entity to solicit (poll) a response frame from the peer error-correcting entity. The F bit set to 1 is used by an error-correcting entity to indicate the response frame transmitted as a result of a soliciting (poll) command.

8.2.3.2 Variables and sequence numbers

8.2.3.2.1 Modulus

Each I frame is sequentially numbered and may have the value 0 through n minus 1 (where n is the modulus of the sequence numbers). The modulus equals 128 and the sequence numbers cycle through the entire range, 0 through 127.

NOTE – All arithmetic operations on state variables and sequence numbers contained in this Recommendation are affected by the modulus operation.

8.2.3.2.2 Send state variable V(S)

Each connection shall have an associated V(S) when using I frame commands. V(S) denotes the sequence number of the next I frame to be transmitted. V(S) can take on the value 0 through n minus 1. The value of V(S) shall be incremented by 1 with each successive I frame transmission, and shall not exceed V(A) by more than the maximum number of outstanding I frames, k . The value of k may be in the range of $1 \leq k \leq 127$.

8.2.3.2.3 Acknowledge state variable V(A)

Each connection shall have an associated V(A) when using I frame commands and supervisory frame commands/responses. V(A) identifies the last frame that has been acknowledged by its peer ($V(A) - 1$ equals the N(S) of the last acknowledged I frame). V(A) can take on the value 0 through n minus 1. The value of V(A) shall be updated by the valid N(R) values received from its peer (see 8.2.3.2.6). A valid N(R) value is one that is in the range $V(A) \leq N(R) \leq V(S)$.

8.2.3.2.4 Send sequence number N(S)

Only I frames contain N(S), the send sequence number of transmitted I frames. At the time that an in-sequence I frame is designated for transmission, the value of N(S) is set equal to V(S).

8.2.3.2.5 Receive state variable V(R)

Each connection shall have an associated V(R) when using I frame commands and supervisory frame commands/responses. V(R) denotes the sequence number of the next in-sequence I frame expected to be received. V(R) can take on the value 0 through n minus 1. The value of V(R) shall be incremented by one with the receipt of an error-free, in-sequence I frame whose N(S) equals V(R).

8.2.3.2.6 Receive sequence number N(R)

All I frames and supervisory frames contain N(R), the expected send sequence number of the next received I frame. At the time that a frame of the above types is designated for transmission, the value of N(R) is set equal to V(R). N(R) indicates that the error-correcting entity transmitting the N(R) has correctly received all I frames numbered up to and including $N(R) - 1$.

8.2.4 Frame types

8.2.4.1 Commands and responses

The command and response frames listed in Table 8 are used by either error-correcting entity. For purposes of the LAPM procedures, those frame types not identified in Table 8 are classified as undefined command and/or response control fields; the actions to be taken are specified in 8.5.5.

Table 8/V.42 – Commands and responses

Format	Commands	Responses	Encoding								Octet	
			8	7	6	5	4	3	2	1		
Information transfer	I (information)		N(S)								0	3
			N(R)								P	4
Supervisory	RR (receive ready)	RR (receive ready)	0	0	0	0	0	0	0	1	3	
			N(R)								P/F	4
	RNR (receive not ready)	RNR (receive not ready)	0	0	0	0	0	1	0	1	3	
			N(R)								P/F	4
	REJ (reject)	REJ (reject)	0	0	0	0	1	0	0	1	3	
			N(R)								P/F	4
	SREJ (selective reject)	SREJ (selective reject)	0	0	0	0	1	1	0	1	3	
			N(R)								P/F = 0	4
Unnumbered	SABME (set asynchronous balanced mode extended)		0	1	1	P	1	1	1	1	3	
		DM (disconnected mode)	0	0	0	F	1	1	1	1	3	
	UI (unnumbered information)	UI (unnumbered information)	0	0	0	P/F	0	0	1	1	3	
	DISC (disconnect)		0	1	0	P	0	0	1	1	3	
		UA (unnumbered acknowledgment)	0	1	1	F	0	0	1	1	3	
		FRMR (frame reject)	1	0	0	F	0	1	1	1	3	
	XID (exchange identification)	XID (exchange identification)	1	0	1	P/F = 0	1	1	1	1	3	
	TEST (test)		1	1	1	P = 0	0	0	1	1	3	

The commands and responses in Table 8 are defined in 8.2.4.2 through 8.2.4.14.

8.2.4.2 Information (I) command

The function of the information (I) command is to transfer, across an error-corrected connection, sequentially numbered frames containing data received from the V.24 interface and provided by the control function.

8.2.4.3 Set asynchronous balanced mode extended (SABME) command

The SABME unnumbered command is used to place the addressed error-correcting entity into the connected state.

No information field is permitted with the SABME command. An error-correcting entity confirms acceptance of an SABME command by the transmission at the first opportunity of a UA response. Upon acceptance of this command, the error-correcting entity's $V(S)$, $V(A)$, and $V(R)$ are set to 0. The transmission of an SABME command indicates the clearance of all exception conditions.

Previously-transmitted I frames that are unacknowledged when this command is processed remain unacknowledged and are discarded.

8.2.4.4 Disconnect (DISC) command

The DISC unnumbered command is used to return to the disconnected state.

No information field is permitted with the DISC command. The error-correcting entity receiving the DISC command confirms the acceptance of a DISC command by the transmission of a UA response. The error-correcting entity sending the DISC command terminates the error-corrected connection when it receives the acknowledging UA or DM response.

Previously-transmitted I frames that are unacknowledged when this command is processed remain unacknowledged and are discarded.

8.2.4.5 Unnumbered information (UI) command/response

Unnumbered information (UI) frames are used to convey control information outside the DTE information stream, which is carried by I frames. This control information may be associated with the DTE's information stream (e.g. a break signal). No sequence numbers are contained within the control field of a UI frame. The P/F bit of a UI frame is set to 0.

The encoding of this information field is given in 12.3.

8.2.4.6 Receive ready (RR) command/response

The RR supervisory frame is used by an error-correcting entity to:

- a) indicate it is ready to receive an I frame;
- b) acknowledge previously received I frames numbered up to and including $N(R) - 1$ (as defined in 8.4.3.1); and
- c) clear a busy condition that was indicated by the earlier transmission of an RNR frame by that same error-correcting entity.

In addition to indicating the status of an error-correcting entity, the RR command with the P bit set to 1 may be used by the error-correcting entity to ask for the status of its peer error-correcting entity.

8.2.4.7 Reject (REJ) command/response

The REJ supervisory frame is used by an error-correcting entity to request retransmission of I frames starting with the frame numbered $N(R)$. The value of $N(R)$ in the REJ frame acknowledges I frames numbered up to and including $N(R) - 1$. New I frames pending initial transmission shall be transmitted following the retransmitted I frame(s).

Only one REJ exception condition for a given direction of information transfer is established at a time. The REJ exception condition is cleared (reset) upon the receipt of an I frame with an $N(S)$ equal to the $N(R)$ of the REJ frame.

The transmission of an REJ frame shall also indicate the clearance of any busy condition within the sending error-correcting entity that was reported by the earlier transmission of an RNR frame by that same error-correcting entity.

In addition to indicating the status of an error-correcting entity, the REJ command with the P bit set to 1 may be used by the error-correcting entity to ask for the status of its peer error-correcting entity.

8.2.4.8 Selective reject (SREJ)

8.2.4.8.1 Selective reject (SREJ) command/response (for use with s-SREJ procedure)

Implementation of the single-Selective Reject (s-SREJ) procedure is optional; if implemented it shall use the SREJ frame as described here. When implemented, it is used by an error-correcting entity to request retransmission of the single I frame numbered N(R). The P/F bit of a SREJ frame is always set to 0. In this case, the N(R) of the SREJ frame does not indicate acknowledgement of any I frames.


Each SREJ exception condition is cleared upon receipt of the I frame with an N(S) equal to the N(R) of the SREJ frame. An error-correcting entity may transmit one or more SREJ frames, each containing a different N(R), with the P/F bit set to 0 before one or more earlier SREJ exception conditions have been cleared.

I frames that may have been transmitted following the I frame indicated by the SREJ frame shall not be retransmitted as the result of receiving an SREJ frame. Additional I frames awaiting initial transmission may be transmitted following the retransmission of the specific I frame requested by the SREJ frame.

8.2.4.8.2 Selective reject (SREJ) response (for use with m-SREJ)

Implementation of the multi-Selective Reject (m-SREJ) procedure is optional; if implemented it shall use the SREJ response frame as described here. When implemented, it is used by an error-correcting entity to initiate error recovery by requesting retransmission of one or more (not necessarily contiguous) lost I frames. The N(R) field of the control field of the SREJ frame shall contain the sequence number of the earliest I frame to be retransmitted and the information field shall contain the sequence numbers of additional I frames(s), if any, in need of retransmission.

The error-correcting entity shall create a list of sequence numbers N(X), N(X) + 1, N(X) + 2, N(Y), N(Z) + 3, N(Z) + 4, ..., N(S) – 1, where N(X) is greater than or equal to V(R) and none of the I frames N(X) to N(S) – 1 have been received. The N(R) field of the SREJ frame shall be set to N(X) and the information field set to the list N(X) + 1, ..., N(S) – 1. The information field shall be encoded such that there is one octet for each I frame in need of retransmission. The sequence number of each designated I frame shall occupy bit positions 2-8 of an octet, as depicted in Figure 9.

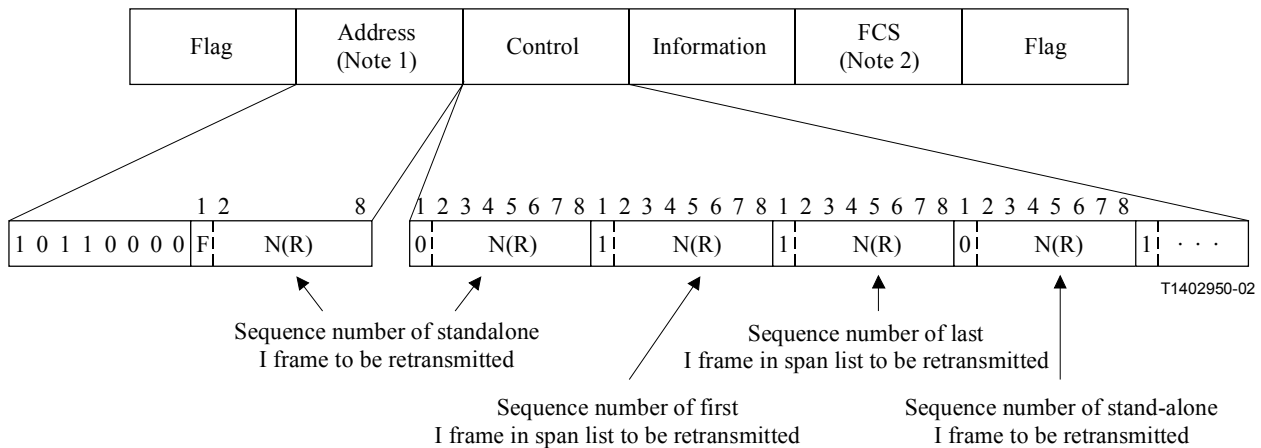

NOTE 1 – The maximum size of this field is limited to 2 octets.
 NOTE 2 – The FCS field can be either 16 bits or 32 bits in length.

Figure 9/V.42 – Control and information field encoding of SREJ frame for m-SREJ procedure

If the list of sequence numbers is too large to fit in the information field of the SREJ frame, then the list shall be truncated to fit in one SREJ frame, by including only the earliest sequence numbers. The truncated sequence number may be transmitted in another SREJ frame. The number of bits in the information field of an SREJ frame shall not exceed the value of parameter N401, the maximum number of octets in the information field of a frame.

If the F bit in an SREJ frame is set to 1, then I frames numbered up to $N(R) - 1$ inclusive are considered as acknowledged. If the F bit in an SREJ frame is set to 0, then the $N(R)$ in the control field of the SREJ frame does not indicate acknowledgment of I frames.

Each SREJ exception condition is cleared upon receipt of the I frame(s) with an $N(R)$ identified in the SREJ frame control field and, if present, information field. An error-correcting entity may transmit one or more SREJ response frames with their F bit set to 0, each containing one or more different $N(R)$ values before earlier exception conditions have been cleared.

I frames that may have been transmitted following an I frame indicated in an SREJ frame shall not be transmitted as the result of receiving an SREJ frame. Additional I frames awaiting initial transmission may be transmitted following the retransmission of a specific I frame(s) requested by an SREJ frame.

8.2.4.9 Receive not ready (RNR) command/response

The RNR supervisory frame is used by an error-correcting entity to indicate a busy condition; that is, a temporary inability to accept additional incoming I frames. The value of $N(R)$ in the RNR frame acknowledges I frames numbered up to and including $N(R) - 1$.

In addition to indicating the status of an error-correcting entity, the RNR command with the P bit set to 1 may be used by the error-correcting entity to ask for the status of its peer error-correcting entity.

8.2.4.10 Unnumbered acknowledgement (UA) response

The UA unnumbered response is used by an error-correcting entity to acknowledge the receipt and acceptance of the mode-setting commands (SABME or DISC). Received mode-setting commands are not processed until the UA response is transmitted. No information field is permitted with the UA response. The transmission of the UA response indicates the clearance of any busy condition that was reported by the earlier transmission of an RNR frame by that same error-correcting entity.

8.2.4.11 Disconnected mode (DM) response

The DM unnumbered response is used by an error-correcting entity to report to its peer that the error-correcting entity is in the disconnected state and/or unable or unwilling to enter the connected state. No information field is permitted with the DM response. For specific information on the handling of receiver DM frames, see Table 9 and 8.9.3.

Table 9/V.42 – Actions taken on receipt of unsolicited response frames

Unsolicited response frame	Disconnected state	Awaiting connection establishment	Awaiting connection release	Connected state	
				Not in timer-recovery condition	In timer-recovery condition
UA response F = 1	Ignore*	(Solicited)	(Solicited)	Ignore*	Ignore*
UA response F = 0	Ignore*	Ignore*	Ignore*	Ignore*	Ignore*
DM response F = 1	Ignore	(Solicited)	(Solicited)	Ignore*	(Solicited)
DM response F = 0	Establish connection	Ignore	Ignore	Termination connection	Termination connection
RR, RNR, REJ response: F = 1	Ignore	Ignore	Ignore	Ignore*	(Solicited)
RR, RNR, REJ response: F = 0	Ignore	Ignore	Ignore	(Solicited)	(Solicited)
SREJ response F = 1	Ignore	Ignore	Ignore	Termination connection	Termination connection
SREJ response F = 0	Ignore	Ignore	Ignore	(Solicited)	(Solicited)
NOTE 1 – For ignore-cases marked with an asterisk (*), the error-correcting entity shall inform the control function of a protocol violation. Receipt of a UI frame with an unrecognized encoding shall be signalled to the control function as a protocol violation.					
NOTE 2 – Cases marked as (solicited) represent proper protocol operation.					

8.2.4.12 Frame reject (FRMR) response

The FRMR unnumbered response may be received by an error-correcting entity as a report of an error condition not recoverable by retransmission of the identical frame, i.e. at least one of the following error conditions resulting from the receipt of a valid frame:

- the receipt of a command or response control field that is undefined or not implemented;
- the receipt of a supervisory or unnumbered frame with incorrect length;
- the receipt of an invalid N(R); or
- the receipt of a frame with an information field which exceeds the maximum established length.

An undefined control field is any of the control-field encodings not identified in Table 8.

A valid N(R) value is one that is in the range $V(A) \leq N(R) \leq V(S)$.

An information field which immediately follows the control field and consists of five octets is returned with this response and provides the reason for the FRMR response. This information field format is given in Figure 10.

8	7	6	5	4	3	2	1	Octet
Rejected frame control field								4
								5
V(S)							0	6
V(R)							C/R	7
0	0	0	0	Z	Y	X	W	8

NOTE 1 – Rejected frame control field is the control field of the received frame which caused the frame reject. When the rejected frame is an unnumbered frame, the control field of the rejected frame is positioned in octet 4, with octet 5 set to 00000000.

NOTE 2 – V(S) is the current send state variable value of the error-correcting entity reporting the rejection condition.

NOTE 3 – C/R is set to 1 if the frame rejected was a response and is set to 0 if the frame rejected was a command.

NOTE 4 – V(R) is the current receive state variable value of the error-correcting entity reporting the rejection condition.

NOTE 5 – W set to 1 indicates that the control field received and returned in octets 4 and 5 was undefined or not implemented.

NOTE 6 – X set to 1 indicates that the control field received and returned in octets 4 and 5 was considered invalid because the frame contained an information field which is not permitted with this frame or is a supervisory or unnumbered frame with incorrect length. Bit W must be set to 1 in conjunction with this bit.

NOTE 7 – Y set to 1 indicates that the information field received exceeded the maximum established information field length (N401) of the error-correcting entity reporting the rejection condition.

NOTE 8 – Z set to 1 indicates that the control field received and returned in octets 4 and 5 contained an invalid N(R).

NOTE 9 – Octet 6, bit 1 and octet 8, bits 5 through 8 shall be set to 0.

Figure 10/V.42 – FRMR information field format

8.2.4.13 Exchange identification (XID) command/response

XID frames are used to exchange general identification information. No sequence numbers are contained within the control field of an XID frame. The P/F bit of an XID frame is set to 0.

Within the scope of this Recommendation, the information field of XID frames is used for negotiation/indication of parameter values and optional procedures. The encoding of this information field is given in 12.2.

8.2.4.14 Test (TEST) command

Implementation of the TEST command frame is optional. When implemented, it is used to conduct a loop-back test between the two control functions. No sequence numbers are contained within the control field of a TEST frame. The P bit of a TEST command frame is set to 0.

An information field, not specified by this Recommendation, is also included in the frame. The control function initiating a loop-back test chooses the contents of the information field. The control function responding to a loop-back test returns the information field received from the initiator.

8.2.5 Use of timers

For various functions in the following subclauses, timers are used to ensure proper operation of the protocol. In these subclauses, the following terminology is used to describe timer operations:

- a) to start or restart a timer both imply that the timer is set to run from a predefined value;
- b) to stop a timer implies that it no longer runs and that the value of the timer at the time it is stopped is of no significance.

8.3 Establishment of the error-corrected connection

8.3.1 General

The procedures in this subclause are used to establish the error-corrected connection (i.e. go from a disconnected to a connected state) to allow the transfer of user data from V.24 interface to V.24 interface.

On receipt of an L-ESTABLISH request primitive from its control function, the error control function shall attempt to establish the error-corrected connection. The error-correcting entity transmits an SABME frame. All frames other than unnumbered format frames received at this time shall be ignored.

8.3.2 Detailed procedures

8.3.2.1 Establishment procedures

A request to establish the error-corrected connection is initiated by the transmission of the SABME command. All existing exception conditions shall be cleared, the retransmission counter shall be reset, and timer T401 shall then be started (timer T401 is defined in 9.2.1).

NOTE 1 – To avoid misinterpretation of a received DM response frame, the SABME frame shall always be transmitted with its P bit set to 1.

NOTE 2 – When sending the above frame as the first protocol frame following the detection phase (if used) or establishment of the physical connection (if the detection phase is not used), the originator shall first transmit flag patterns for a period of time sufficient to guarantee the transmission of at least 16 flag patterns.

An error-correcting entity receiving an SABME command, if it is able to establish the error-corrected connection (as indicated by receipt of an L-ESTABLISH response primitive from the control function in response to an L-ESTABLISH indication primitive), shall:

- respond with a UA response with the F bit set to the same binary value as the P bit in the received SABME command;
- set V(S), V(R), and V(A) to 0;
- consider the error-corrected connection as established and enter the connected state;
- clear all existing exception conditions;
- clear any existing peer-receiver busy condition; and
- start timer T403 (timer T403 is defined in 9.2.6) if implemented.

NOTE 3 – When a repeated SABME frame is received during link establishment, indicating that the originating DCE may not have received the UA response, any unacknowledged I frames remain unacknowledged with respect to the error control function. Responsibility for the contents of the information fields of such I frames reverts to the control function. Whether or not the contents of these information fields are reassigned to the error control function is decided by the control function.

If the control function is unable to accept establishment of the error-corrected connection (as indicated by an L-RELEASE request primitive from the control function in response to an L-ESTABLISH indication primitive), the error-correcting entity shall respond to the SABME command with a DM response with the F bit set to the same binary value as the P bit in the received SABME command.

Upon reception of the UA response with the F bit set to 1, the originator of the SABME command shall:

- stop timer T401;
- start timer T403 if implemented;
- set V(S), V(R), and V(A) to 0; and
- consider the error-corrected connection as established (i.e. enter the connected state) and inform the control function by using the L-ESTABLISH confirmation primitive.

Upon reception of a DM response with the F bit set to 1, the originator of the SABME command shall inform its control function of a failure to establish the error-corrected connection (by issuing an L-RELEASE indication primitive) and stop timer T401. DM responses with the F bit set to 0 shall be ignored in this case.

Upon receipt of an I frame or a supervisory frame, the originator of the SABME command may assume that the responding error-correcting entity has received and accepted the SABME command and sent a UA response, but that the UA response was lost in transmission. It may proceed as though a UA response has been received, and perform the actions noted above for reception of the UA response before processing the received I frame or supervisory frame.

8.3.2.2 Procedure on expiry of timer T401

If timer T401 expires before the UA or DM response with the F bit set to 1 is received, the error-correcting entity shall:

- retransmit the SABME command as above;
- restart timer T401; and
- increment the retransmission counter (N400).

After retransmission of the SABME command N400 times and failure to receive a response, the error-correcting entity shall indicate this to the control function by means of the L-RELEASE indication primitive. Any data in queue shall be discarded.

The value of N400 is defined in 9.2.2.

8.4 Transfer of user data from the V.24 interface

Having either transmitted the UA response to a received SABME command or received the UA response to a transmitted SABME command, information transfer may commence. This clause deals with the transfer of user data from the V.24 interface. Clause 8.6 deals with the transfer of control information.

8.4.1 Transmitting I frames

Data received by the error-correcting entity from the control function by means of an L-DATA request primitive shall be transmitted in an I frame. The control field parameters N(S) and N(R) shall be assigned the values V(S) and V(R), respectively. V(S) shall be incremented by 1 at the end of the transmission of the I frame.

If timer T401 is not running at the time of transmission of an I frame, it shall be started. If timer T401 expires, the procedures defined in 8.4.8 shall be followed.

If V(S) is equal to V(A) plus k (where k is the maximum number of outstanding I frames – see 9.2.4), the error-correcting entity shall not transmit any new I frames, but may retransmit an I frame as a result of the error-recovery procedures as described in 8.4.4 and 8.4.5.

When an error-correcting entity is in an own-receiver busy condition, it may still transmit I frames, provided that a peer-receiver busy condition does not exist.

NOTE – L-DATA request primitives received while in the timer-recovery condition (see 8.5.3) shall be queued.

8.4.2 Receiving I frames

Independent of a timer-recovery condition, when an error-correcting entity is not in an own-receiver busy condition and receives a valid I frame whose N(S) is equal to the current V(R), the error-correcting entity shall:

- pass the information field of this frame to the control function using the L-DATA indication primitive;
- increment by 1 its V(R) and act as indicated below.

8.4.2.1 P bit set to 1

If the P bit of the received I frame was set to 1, the error-correcting entity shall respond to its peer in one of the following ways:

- if the error-correcting entity receiving the I frame is still not in an own-receiver busy condition, it shall send an RR response with the F bit set to 1;
- if the error-correcting entity receiving the I frame enters the own-receiver busy condition upon receipt of the I frame, it shall send an RNR response with the F bit set to 1.

8.4.2.2 P bit set to 0

If the P bit of the received I frame was set to 0 and:

- a) if the error-correcting entity is still not in an own-receiver busy condition:
 - if no I frame is available for transmission or if an I frame is available for transmission but a peer-receiver busy condition exists, the error-correcting entity shall transmit an RR response with the F bit set to 0; or
 - if an I frame is available for transmission and no peer-receiver busy condition exists, the error-correcting entity shall transmit the I frame with the value of $N(R)$ set to the current value of $V(R)$ as defined in 8.4.1; or
- b) if, on receipt of this I frame, the error-correcting entity is now in an own-receiver busy condition, it shall transmit an RNR response with the F bit set to 0.

When the error-correcting entity is in an own-receiver busy condition, it shall process any received I frame according to 8.4.7.

8.4.3 Sending and receiving acknowledgements

8.4.3.1 Sending acknowledgements

Whenever an error-correcting entity transmits an I frame or an RR, RNR, or REJ supervisory frame, $N(R)$ shall be set equal to $V(R)$.

8.4.3.2 Receiving acknowledgements

On receipt of a valid I frame or an RR, RNR, or REJ supervisory frame, even in the own-receiver busy or the timer recovery condition, the error-correcting entity shall treat the $N(R)$ contained in this frame as an acknowledgement for all the I frames it has transmitted with an $N(S)$ up to and including the received $N(R) - 1$. $V(A)$ shall be set to $N(R)$. The error-correcting entity shall stop the timer T401 on receipt of a valid I frame or an RR, RNR, or REJ supervisory frame with the $N(R)$ higher than $V(A)$ (actually acknowledging some I frames), or an REJ frame with an $N(R)$ equal to $V(A)$. The error-correcting entity shall stop the timer T401 on receipt of an SREJ supervisory frame with an $N(R)$ equal to or higher than $V(A)$, even though there is no acknowledgement function associated with the $N(R)$ contained in the SREJ frame.

NOTE 1 – If an RR, RNR, or REJ supervisory frame with P bit set to 1 has been transmitted and not acknowledged, timer T401 shall not be stopped.

NOTE 2 – Upon receipt of a valid I frame, timer T401 shall not be stopped if the error-correcting entity is in the peer-receiver busy condition (i.e. the remote error-correcting entity had indicated a busy condition).

If timer T401 has been stopped by the receipt of an I, RR, or RNR frame, and if there are outstanding I frames still unacknowledged, the error-correcting entity shall restart timer T401. If timer T401 then expires, the error-correcting entity shall follow the recovery procedure as defined in 8.4.8 with respect to the unacknowledged I frames.

If timer T401 has been stopped by the receipt of an REJ frame, the error-correcting entity shall follow the retransmission procedures in 8.4.4.

If timer T401 has been stopped by the receipt of an SREJ frame, the error-correcting entity shall follow the selective retransmission in 8.4.5 and start timer T401. If timer T401 then expires, the error-correcting entity shall follow the recovery procedure defined in 8.4.8 with respect to the unacknowledged I frames.

8.4.4 Receiving REJ frames

On receipt of a valid REJ frame, the error-correcting entity shall act as follows:

- a) if it is not in the timer-recovery condition:
 - clear an existing peer-receiver busy condition;
 - set its V(S) and its V(A) to the value of the N(R) contained in the REJ frame control field;
 - stop timer T401;
 - start timer T403 if implemented;
 - if it was an REJ command frame with the P bit set to 1, transmit an appropriate supervisory response frame (see Note 2 in 8.4.6) with the F bit set to 1;
 - transmit the corresponding I frame as soon as possible, as defined in 8.4.1, taking into account items 1) to 3) below and the paragraph following items 1) to 3); and
 - note that a protocol violation has occurred if the received frame was an REJ response frame with the F bit set to 1;
- b) if it is in the timer-recovery condition and it was an REJ response frame with the F bit set to 1:
 - clear an existing peer-receiver busy condition;
 - set its V(S) and its V(A) to the value of the N(R) contained in the control field of the REJ frame;
 - stop timer T401;
 - start timer T403 if implemented; and
 - transmit the corresponding I frame as soon as possible, as defined in 8.4.1, taking into account items 1) to 3) below and the paragraph following items 1) to 3);
- c) if it is in the timer-recovery condition and it was an REJ frame other than an REJ response frame with the F bit set to 1:
 - clear an existing peer-receiver busy condition;
 - set its V(A) to the value of the N(R) contained in the control field of the REJ frame; and
 - if it was an REJ command frame with the P bit set to 1, transmit an appropriate supervisory response frame with the F bit set to 1 (see Note 2 in 8.4.6).

Transmission of I frames shall take account of the following:

- 1) if the error-correcting entity is transmitting a supervisory frame when it receives the REJ frame, it shall complete that transmission before commencing transmission of the requested I frame;
- 2) if the error-correcting entity is transmitting an SABME command, a DISC command, a UA response, or a DM response when it receives the REJ frame, it shall ignore the request for retransmission; and
- 3) if the error-correcting entity is not transmitting a frame when the REJ is received, it shall immediately commence transmission of the requested I frame.

All outstanding unacknowledged I frames, commencing with the I frame identified in the received REJ frame shall be transmitted. Other I frames not yet transmitted may be transmitted following the retransmitted I frames.

8.4.5 Receiving SREJ frames

8.4.5.1 Single-SREJ procedure

If the optional selective retransmission procedure has been agreed for use on the error-corrected connection, then receipt of an SREJ frame results in the retransmission of the I frame whose N(S) is equal to the N(R) in the SREJ frame. No other I frames shall be retransmitted as a result of receiving the SREJ frame (however, I frames pending initial transmission may be transmitted).

Transmission of I frames shall take account of the following:

- 1) if the error-correcting entity is transmitting a supervisory frame when it receives the SREJ frame, it shall complete that transmission before commencing transmission of the requested I frame;
- 2) if the error-correcting entity is transmitting an SABME command, a DISC command, a UA response, or a DM response when it receives the SREJ frame, it shall ignore the request for retransmission; and
- 3) if the error-correcting entity is not transmitting a frame when the SREJ is received, it shall immediately commence transmission of the requested I frame.

If the optional selective retransmission procedure has not been agreed for use, then receipt of an SREJ frame shall be treated as an unrecognized command/response control field (see 8.5.5).

8.4.5.2 Multi-SREJ procedure

8.4.5.2.1 SREJ response frame with F bit set to 0

When receiving an SREJ response frame with its F bit set to 0, the error-correcting entity shall retransmit all I frames whose sequence numbers are indicated in the N(R) field and the information field of the SREJ frame, in the order specified in the SREJ frame. Retransmission shall conform to the following:

- a) If the error-correcting entity is transmitting a supervisor or I frame when it receives the SREJ frame, it shall complete that transmission before commencing transmission of the requested I frame(s).
- b) If the error-correcting entity is transmitting an unnumbered command or response when it receives the SREJ frame, it shall ignore the request for retransmission.
- c) If the error-correcting entity is not transmitting any frame when it receives the SREJ frame, it shall commence transmission of the requested I frames immediately.

If there is no outstanding poll condition, then a poll shall be sent either by transmitting an RR command (or RNR command if the error-correcting entity is in the busy condition) with the P bit set to 1 or by setting the P bit in the last retransmitted I frame and timer T401 shall be restarted.

If there is an outstanding poll condition, then timer T401 shall not be restarted.

8.4.5.2.2 SREJ response frame with F bit set to 1

When receiving an SREJ response frame with its F bit set to 1, the error-correcting entity shall retransmit all I frames whose sequence numbers are indicated in the N(R) field and the information field of the SREJ frame, in the order specified in the SREJ frame, except those I frames that were sent subsequent to the frame with the P bit set to 1 was sent. Retransmission shall conform to the following:

- a) If the error-correcting entity is transmitting a supervisory or I frame when it receives the SREJ frame, it shall complete that transmission before commencing transmission of the requested I frames.
- b) If the error-correcting entity is transmitting an unnumbered command or response when it receives the SREJ frame, it shall ignore the request for retransmission.
- c) If the error-correcting entity is not transmitting any frame when it receives the SREJ frame, it shall commence transmission of the requested I frames immediately.

If any frames are retransmitted, then a poll shall be sent either by transmitting an RR command (or RNR command if the error-correcting entity is in the busy condition) with the P bit set to 1 or by setting the P bit in the last retransmitted I frame.

Timer T401 shall be restarted.

8.4.6 Receiving RNR frames

After receiving a valid RNR command or response, if the error-correcting entity is not engaged in a mode-setting operation (i.e. not transmitting an SABME or DISC frame), it shall set a peer-receiver busy condition and then:

- if it was an RNR command with the P bit set to 1, it shall respond with an RR response with the F bit set to 1 if the error-correcting entity is not in an own-receiver busy condition, and shall respond with an RNR response with the F bit set to 1 if the error-correcting entity is in an own-receiver busy condition; and
- if it was an RNR response with the F bit set to 1, an existing timer-recovery condition shall be cleared and the N(R) contained in this RNR response shall be used to update V(S).

The error-correcting entity shall take note of the peer-receiver busy condition and not transmit any I frames to the remote error-correcting entity.

NOTE 1 – The N(R) in any RR or RNR command frame (irrespective of the setting of the P bit) will not be used to update the send state variable V(S).

The error-correcting entity shall then:

- treat the N(R) contained in the received RNR frame as an acknowledgement for all the I frames that have been (re)transmitted with an N(S) up to and including $N(R) - 1$, and set its V(A) to the value of the N(R) contained in the RNR frame; and
- restart timer T401 unless a supervisory response frame with F bit set to 1 is still expected.

If timer T401 expires, the error-correcting entity shall:

- if it is not yet in a timer-recovery condition, enter the timer-recovery condition and reset the retransmission count variable; or
- if it is already in a timer-recovery condition, add one to its retransmission count variable.

The error-correcting entity shall then:

- a) if the value of the retransmission count variable is less than N400:
 - transmit an appropriate RR, RNR, or REJ supervisory command (see Note 2) with P bit set to 1;
 - restart timer T401; and

- b) if the value of the retransmission count variable is equal to N400, initiate a re-establishment procedure as defined in 8.4.9.

The error-correcting entity receiving the RR, RNR, or REJ supervisory frame with the P bit set to 1 shall respond, at the earliest opportunity, with an RR, RNR, or REJ supervisory response frame (see Note 2) with the F bit set to 1 to indicate whether or not its own-receiver busy condition still exists.

Upon receipt of a supervisory response with F bit set to 1, the error-correcting entity shall stop timer T401, and:

- if the response is an RR or REJ or SREJ response, the peer-receiver busy condition is cleared and the error-correcting entity may transmit new I frames or retransmit I frames as defined in 8.4.1 or 8.4.4, respectively; or
- if the response is an RNR response, the error-correcting entity receiving the response shall proceed according to the first paragraph of this clause.

If a supervisory command (RR, RNR, or REJ) with the P bit set to 0 or 1, or a supervisory response frame (RR, RNR, or REJ) with the F bit set to 0 is received during the enquiry process, the error-correcting entity shall:

- if the supervisory frame is an RR or REJ command frame or an RR, REJ or an SREJ response frame, clear the peer-receiver busy condition and if the supervisory frame received was a command with the P bit set to 1, transmit the appropriate supervisory response frame (see Note 2) with the F bit set to 1. However, the transmission or retransmission of I frames shall not be undertaken until the appropriate supervisory response frame with the F bit set to 1 is received or until the expiry of timer T401; or
- if the supervisory frame is an RNR command frame or an RNR response frame, retain the peer-receiver busy condition and if the supervisory frame received was an RNR command with P bit set to 1, transmit the appropriate supervisory response frame (see Note 2) with the F bit set to 1.

NOTE 2 – If the error-correcting entity is not in an own-receiver busy condition and is in a reject-exception condition [that is, an N(S) sequence error has been detected and an REJ frame has been transmitted, but the requested I frame has not been received], the appropriate supervisory frame is the RR frame.

- if the error-correcting entity is not in an own-receiver busy condition but is in an N(S) sequence error exception condition [that is, an N(S) sequence error has been detected but an REJ frame has not been transmitted], the appropriate supervisory frame is the REJ frame;
- if the error-correcting entity is in its own-receiver busy condition, the appropriate supervisory frame is the RNR frame;
- otherwise, the appropriate supervisory frame is the RR frame.

8.4.7 Own-receiver busy condition

When the error-correcting entity enters an own-receiver busy condition, it shall transmit an RNR frame at the earliest opportunity.

The RNR frame may be either:

- an RNR frame with the F bit set to 0; or
- if this condition is entered on receiving a command frame with the P bit set to 1, an RNR response with the F bit set to 1; or
- if this condition is entered on expiry of timer T401, an RNR command with the P bit set to 1.

All received I frames with the P bit set to 0 shall be discarded, after updating V(A).

All received RR, RNR, and REJ supervisory frames with the P/F bit set to 0 shall be processed, including updating V(A).

All received SREJ supervisory frames with the P/F bit set to 0 shall be processed as specified in 8.4.5.

All received I frames with the P bit set to 1 shall be discarded, after updating V(A). However, an RNR response frame with the F bit set to 1 shall be transmitted.

All received RR, RNR, and REJ supervisory frames with the P bit set to 1 shall be processed, including updating V(A). An RNR response with the F bit set to 1 shall be transmitted.

To indicate to the peer error-correcting entity the clearance of the own-receiver busy condition, the error-correcting entity shall transmit an RR frame or, if a previously-detected N(S) sequence error has not yet been reported, an REJ frame with its N(R) set to the current value of V(R) or an SREJ frame (if agreed for use).

8.4.8 Waiting acknowledgement

The error-correcting entity shall maintain an internal retransmission count variable.

If timer T401 expires, the error-correcting entity shall:

- if it is not yet in the timer-recovery condition, enter the timer-recovery condition and reset the retransmission count variable; or
- if it is already in the timer-recovery condition, add one to its retransmission count variable.

The error-correcting entity shall then:

- a) if the value of the retransmission count variable is less than N400, restart timer T401 and transmit an appropriate supervisory command (see Note 2 in 8.4.6) with the P bit set to 1; or
- b) if the value of the retransmission count variable is equal to N400, initiate a termination procedure as defined in 8.4.9.

The time-recovery condition is cleared when the error-correcting entity receives a valid supervisory response frame with the F bit set to 1. If the received RR, RNR, or REJ supervisory frame N(R) is within the range from its current V(A) to its current V(S), inclusive, it shall set its V(S) to the value of the received N(R). If the received SREJ supervisory frame N(R) is within the range from the current V(A) to V(S), inclusive, it shall follow the procedures outlined in 8.4.5.2.1 or 8.4.5.2.2 depending on the setting of the F bit. Timer T401 shall be stopped if the received supervisory frame response is an RR or REJ response, and then the error-correcting entity shall resume with I frame transmission or retransmission, as appropriate. Timer T401 shall be stopped and restarted if the received supervisory response is an RNR response, to proceed with the enquiry process according to 8.4.6.

8.4.9 Termination of the error-corrected connection

8.4.9.1 Criteria for termination

The criteria for termination of an error-corrected connection are defined in this clause by the following conditions:

- the receipt, while in the connected state, of an SABME except that an answering error-correcting entity shall accommodate the possibility that the originating error-correcting entity may retransmit an SABME during initial link establishment if the UA response is lost in transmission;
- the occurrence of N400 retransmission failures while in the timer recovery condition (see 8.4.8);
- the occurrence of a frame-rejection condition as identified in 8.5.5;
- the receipt, while in the connected state, of an FRMR response frame (see 8.5.6);

- the receipt, while in the connected state, of an unsolicited DM response with the F bit set to 0 (see 8.5.7);
- the receipt, while in the timer recovery condition, of a DM response with the F bit set to 1.

8.4.9.2 Procedures

In all termination situations, an L-RELEASE indication primitive shall be passed to the control function, and the disconnected state shall be entered. The control function shall cause the immediate release of the physical connection.

8.5 Exception condition reporting and recovery

Exception conditions may occur as the result of errors on the physical connection or procedural errors by an error-correcting entity.

The error-recovery procedures that are available to effect recovery following the detection of an exception condition by an error-correcting entity are defined in this clause.

8.5.1 N(S) sequence error

An N(S) sequence error exception condition occurs in the receiver when a valid I frame is received containing an N(S) value that is not equal to the V(R) at the receiver. Methods for recovering from N(S) sequence error exception conditions are:

- a) use of REJ frames (mandatory);
- b) use of SREJ frames – single frame (s-SREJ) recovery (optional and requires negotiation; see clause 10);
- c) use of SREJ frames – multiple frame (m-SREJ) recovery (optional and requires negotiation; see clause 10).

The action of the receiver depends on whether or not the optional selective-retransmission procedure has been agreed for use on the error-corrected connection. If it has, the information field of I frames whose N(S) is not equal to the V(R) at the receiver shall be held for subsequent delivery to the control function until the expected I frame [i.e. the I frame with its $N(S) = V(R)$] is received. If the selective-retransmission procedure has not been agreed for use, the information field of all I frames whose N(S) does not equal the V(R) shall be discarded.

In either case, the receiver shall not acknowledge [nor increment its V(R)] the I frame causing the sequence error, nor any I frames which may follow, until an I frame with the correct N(S) is received.

An error-correcting entity that receives one or more I frames having sequence errors but which are otherwise error-free, or subsequent supervisory frames, shall use N(R) and P/F bit setting contained in the control field to perform connection-control functions; for example, to receive acknowledgement of previously-transmitted I frames and to cause the error-correcting entity to respond if the P bit is set to 1. Therefore, the retransmitted I frame may contain an N(R) value and P bit that are updated from, and therefore different from, the ones contained in the originally transmitted I frame.

Either the REJ frame or the SREJ frame (either for the s-SREJ procedure or the m-SREJ procedure) is used by the receiving error-correcting entity to initiate an exception condition recovery (retransmission) following the detection of an N(S) sequence error.

For a given direction of information transfer:

- only one REJ exception condition shall be established at a time;
- when using the s-SREJ procedure, any number of SREJ exception conditions may be established at a time;

- when using the m-SREJ procedure, any number of SREJ exception conditions with $F = 0$ may be established at a time; only one SREJ condition with $F = 1$, in response to a poll, may be established.

An error-correcting entity receiving an REJ command or response frame shall initiate sequential transmission (retransmission) of I frames starting with the I frame indicated by the N(R) contained in the REJ frame.

An error-correcting entity receiving an SREJ command or response frame shall initiate retransmission of the I frame(s) indicated by the N(R) and, if present, the information field contained in the SREJ frame.

An REJ or SREJ exception condition is cleared when the requested I frame is received or when an SABME or DISC command is received.

Neither REJ or SREJ frames may be retransmitted [in case of loss of either, the expiration of timer T401 in the remote error-correcting entity will eventually cause resending of the requested I frame(s)]. However, if examination of received I frames indicates that retransmission of the requested frame has occurred without having satisfied the reject condition, a new REJ or SREJ condition may optionally be established and the REJ or SREJ frame repeated.

8.5.2 N(R) sequence error

An N(R) sequence error exception condition occurs in the transmitter when a valid supervisory frame or I frame is received that contains an invalid N(R) value.

A valid N(R) is one that is in the range $V(A) \leq N(R) \leq V(S)$.

The information field contained in an I frame that is correct in sequence and format may be delivered to the control function by means of the L-DATA indication primitive.

The error-correcting entity shall initiate termination according to 8.4.9.2.

8.5.3 Timer-recovery condition

If an error-correcting entity, due to a transmission error, does not receive a single I frame or the last I frame(s) in a sequence of I frames, it will not detect an out-of-sequence exception condition and, therefore, will not transmit an REJ or SREJ frame.

The error-correcting entity that transmitted the unacknowledged I frame(s) shall, on the expiry of timer T401, take appropriate recovery action as defined in 8.4.8 to determine at which I frame retransmission must begin.

8.5.4 Invalid-frame condition

Any frame received that is invalid (as defined in 8.1.3) shall be discarded, and no action shall be taken as a result of that frame.

As an optional procedure in response to an invalid frame, an error-correcting entity may transmit an REJ frame rather than ignoring the frame without taking any action. In all other respects, the received frame shall be discarded, without any indication to the control function of its receipt.

8.5.5 Frame-rejection condition

A frame-rejection condition results from one of the conditions described in 8.2.4.1 (first paragraph) or 8.2.4.12, items b), c) and d).

Upon occurrence of a frame-rejection condition while an error-corrected connection is established, the error-correcting entity shall initiate termination (see 8.4.9.2). At other times, the frame causing the condition shall be discarded.

NOTE – For satisfactory operation, it is essential that a receiver is able to discriminate between invalid frames, as defined in 8.1.3, and I frames with an information field that exceeds the maximum established length [see item d) in 8.2.4.12]. An unbounded frame may be assumed and, thus, discarded if two times the longest-permissible frame plus two octets are received without a flag detection.

8.5.6 Receipt of an FRMR response frame

Upon receipt of an FRMR response frame in the connected state, the error-correcting entity shall initiate termination (see 8.4.9.2).

8.5.7 Unsolicited response frames

The action to be taken on the receipt of an unsolicited response frame is defined in Table 9.

8.6 Transfer of user-control information

User-control information is transferred using the information field of UI frames. A UI frame has the same value of DLCI as that used for transferring user data.

In general, the transfer of user-control information can be done immediately or in sequence with respect to user data. In the first case, the UI frame shall be transmitted immediately after transmission of the current I frame, if any, is completed. In the second case, the UI frame is transmitted only after acknowledgement is received for all unacknowledged I frames. Whether subsequent transmission of I frames can resume immediately after the transmission of the UI frame or await some further event depends on the type of control information transmitted.

See 8.13 for procedures for transmitting a break signal between V.24 interfaces.

8.7 Orderly release of an error-corrected connection

8.7.1 General

These procedures shall be used to return to the disconnected state.

The control function requests release of an error-corrected connection by use of the L-RELEASE request primitive.

All frames other than unnumbered frames received during the release procedures shall be ignored.

All outstanding L-DATA and L-SIGNAL request primitives and all associated frames in queue shall be discarded.

8.7.2 Release procedure

An error-correcting entity shall initiate a request for release of the connection by transmitting the disconnect (DISC) command.

NOTE – To avoid misinterpretation of a received DM response frame, the DISC frame shall always be transmitted with its P bits set to 1.

Timer T401 shall then be started and the retransmission counter reset.

An error-correcting entity receiving a DISC command while in the connected state shall transmit a UA response with the F bit set to the same binary value as the P bit in the received DISC command. An L-RELEASE indication primitive shall be passed to the control function, and the disconnected state shall be entered.

If the originator of the DISC command receives either:

- a UA response with the F bit set to 1; or
- a DM response with the F bit set to 1, indicating that the peer error-correcting entity is already in the disconnected state,

it shall enter the disconnected state and stop timer T401.

The error-correcting entity that issued the DISC command is now in the disconnected state and will notify its control function by means of the L-RELEASE indication primitive. The conditions relating to this state are defined in 8.8.

8.7.3 Procedure on expiry of timer T401

If timer T401 expires before a UA or DM response with its F bit set to 1 is received, the originator of the DISC command shall:

- retransmit the DISC command as defined in 8.7.2;
- restart timer T401; and
- increment the retransmission counter.

If the error-correcting entity has not received the correct response as defined in 8.7.2, after N400 attempts to recover, the error-correcting entity shall enter the disconnected state and notify its control function by means of the L-RELEASE indication primitive.

8.8 Disconnected state

While in the disconnected state:

- the receipt of a DISC command shall result in the transmission of a DM response with F bit set to the value of the received P bit;
- on receipt of an SABME command, the procedures defined in 8.3 shall be followed;
- on receipt of an unsolicited DM response with the F bit set to 0, the error-correcting entity shall, if it is able to and the control function is willing, initiate the error-connection establishment procedures by the transmission of an SABME (see 8.3.2.1); otherwise, the DM shall be ignored; and
- all other frame type shall be discarded.

8.9 Collision of unnumbered commands and responses

8.9.1 Identical transmitted and received set-mode commands

If transmitted and received unnumbered set-mode commands (SABME or DISC) are the same, the error-correcting entities shall send the UA response at the earliest possible opportunity. The indicated state (the connected state if the commands were SABMEs, or the disconnected state if they were DISCs) shall be entered after receiving the UA response. The error-correcting entity shall notify its control function by means of the appropriate primitive.

8.9.2 Different transmitted and received set-mode commands

If the transmitted and received unnumbered set-mode commands (SABME or DISC) are different, the error-correcting entities shall issue a DM response at the earliest possible opportunity. Upon receipt of a DM response with the F bit set to 1, the error-correcting entity shall enter the disconnected state and notify its control function by means of an L-RELEASE indication primitive.

8.9.3 Unsolicited DM response and SABME or DISC command

A DM response with its F bit to 0 colliding with an SABME or DISC command shall be ignored.

8.10 Negotiation/indication of parameter values and optional procedures

8.10.1 General

Upon receipt of an L-SETPARM request primitive from its control function, an error-correcting entity shall initiate procedures using XID frames to negotiate/indicate parameter values and optional procedures with the remote DCE. If data transfer is possible (i.e. the error-corrected connection is in the connected state), then the error-correcting entity shall first transmit an RNR command frame with its P bit set to 1 (see 8.4.7) to its peer and cease transmission of I frames.

NOTE – This is necessary since parameters/procedures to be negotiated/indicated may affect the procedures governing I frame transmission.

Upon completion of the negotiation/indication process, the affected parameter values/procedure settings shall be recorded. If a busy condition had been initiated as part of the process of changing parameter values/procedure settings (see above), then an indication of busy-condition clearance shall be transmitted.

Clauses 9 and 10 indicate which parameters and procedures, respectively, may be negotiated/indicated while 12.2 indicates the encoding of the information field of the XID frame.

8.10.2 Negotiation/Indication procedure

Upon receipt of an L-SETPARM request primitive, the error-correcting entity shall transmit an XID command frame. The information field of this frame shall be used to convey the parameters/procedures to be negotiated/indicated to the remote error-correcting entity. Timer T401 shall then be started and the retransmission counter, N400, reset.

NOTE – When sending the above frame as the first protocol frame following the detection phase (if used) or establishment of the physical connection (if the detection phase is not used), the originator shall first transmit flag patterns for a period of time sufficient to guarantee the transmission of at least 16-flag patterns.

On receipt of an XID command frame used for parameter/procedure negotiation/indication, the error control function shall issue an L-SETPARM indication primitive to its control function, passing it the contents of the information field.

On receipt of an L-SETPARM response primitive from its control function, an error control function shall return the indicated parameter values/procedure settings in the information field of an XID response frame.

If 32-bit FCS is requested and agreed during the protocol establishment phase (see 7.2.2), a called DCE shall be capable of checking subsequent frames against both the 16-bit FCS (see 8.1.1.6.1) and the 32-bit FCS (see 8.1.1.6.2) simultaneously (a frame shall be discarded only if it fails both FCS checks). Until a SABME frame is received, the called DCE transmits frames with a 16-bit FCS. Receipt of a SABME frame with 16- or 32-bit FCS indicates use of the corresponding FCS for all subsequent frames (and checking of frames against both the 16-bit and 32-bit FCS may be disabled). Receipt of another XID command frame, with a 16-bit FCS, shall be responded to according to the negotiation/indication rules using an XID response frame with a 16-bit FCS.

On receipt of an XID response frame used for parameter/procedure negotiation/indication, the error control function shall inform its control function by an L-SETPARM confirmation primitive of the values contained in the information field.

8.10.3 Procedure on expiry of timer T401

If timer T401 expires before receipt of the XID response frame, the error-correcting entity shall:

- retransmit the XID command as above;
- restart timer T401; and
- increment the retransmission counter (N400).

After retransmission of the XID command N400 times and failure to receive an XID response, the error-correcting entity shall notify the control function that the negotiation/indication procedure did not complete.

The value of N400 is defined in 9.2.2.

8.11 Loop-back test

Upon receipt of an L-TEST request primitive from its control function, the error-correcting entity shall transmit a TEST command frame with its P bit set to 0. The information field of the TEST frame shall be used to convey the information provided by the control function. An L-TEST request primitive may be received at any time after completion of the protocol establishment phase. Its receipt does not affect the flow of other frames.

On receipt of a TEST command frame with its P bit set to 0, the error-correcting entity shall issue an L-TEST indication primitive to its control function that also conveys the contents of the information field from the received TEST frame.

8.12 Monitoring functions

8.12.1 General

The procedural elements defined in the earlier parts of clause 8 allow for the supervision of the error-corrected connection. This clause describes procedures that may be used to provide this supervision function. The use of this function is optional.

8.12.2 Supervision during the connected state

The connection verification is a service provided by the error-correcting entity to its control function. This implies that the control function is informed in case of a failure only. Furthermore, the procedure may be incorporated in the "normal" exchange of information and may become more efficient than a procedure based on the involvement of the control function.

The procedure is based on supervisory command frames (RR command, RNR command) and timer T403, and operates during the connected state as follows.

If there are no frames being exchanged on the error-corrected connection (neither new nor outstanding I frames, nor supervisory frames with a P bit set to 1), there is no means to detect a faulty error-corrected connection condition. Timer T403 represents the maximum time allowed without frames being exchanged.

If timer T403 expires, a supervisory command with a P bit set to 1 is transmitted. Such a procedure is protected against transmission errors by making use of timer T401 and the N400 retransmission count.

8.12.3 Connection verification procedures

8.12.3.1 Start timer T403

The timer T403 is started:

- when the connected state is entered; and
- in the connected state whenever timer T401 is stopped.

Upon receiving an I or supervisory frame, timer T403 will be restarted if timer T401 is not to be started.

8.12.3.2 Stop timer T403

The timer T403 is stopped:

- when, in the connected state, the timer T401 is started; and
- upon leaving the connected state.

8.12.3.3 Expiry of timer T403

If timer T403 expires, the error-correcting entity will act as follows (it should be noted that timer T401 is neither running nor expired):

- a) set the retransmission count variable to 0;
- b) enter the timer-recovery condition (see 8.5.3);
- c) transmit a supervisory command with the P bit set to 1 as follows:
 - if there is not an own-receiver busy condition, transmit an RR command; or
 - if there is an own-receiver busy condition, transmit an RNR command;
- d) start timer T401; and
- e) inform the control function after N400 retransmissions.

8.13 Transfer of break

8.13.1 General

Upon receipt of an L-SIGNAL request primitive from its control function, an error-correcting entity shall transmit a UI command frame with its P bit set to 0. The information field of the UI command frame shall be encoded to indicate a break (BRK) message and shall contain the break-handling option as indicated by the control function. If the L-SIGNAL request primitive includes a break length, it shall also be encoded in the information field of the UI frame. (See 12.3 on the encoding of UI frames for transferring a break signal.) Actions taken by the DCE (including the error-correcting entity) are specified in Table 4.

On receipt of a UI command frame indicating a BRK, the error-correcting entity shall issue an L-SIGNAL indication primitive to its control function, conveying the break-handling option and, if present, the break length and follow the actions specified in Table 5. On receipt of an L-SIGNAL response primitive from its control function, an error-correcting entity shall transmit a UI response frame as soon as possible with its F bit set to the same binary value as the received UI command frame. The information field of the UI response frame shall be encoded to indicate a break acknowledgement (BRKACK) message.

On receipt of a UI response frame with a BRKACK message in reply to a UI command frame conveying a BRK message, an error-correcting entity shall issue an L-SIGNAL confirmation primitive to its control function.

NOTE – The exchange of UI frames, in and of itself, does not provide a confirmed service. The confirmed nature of the L-SIGNAL service provided to the control function, as described here, comes about through the association and interpretation of the contents of the information fields of the UI frames exchanged and not the association of a UI response frame with a previously-transmitted UI command frame.

8.13.2 State variables and parameters

8.13.2.1 Send and receive sequence numbers

To distinguish between unique and duplicate UI frames carrying break information, an error-correcting entity shall perform a sequencing operation, modulo 2, on the information field of the UI frame. Bit 8 of the first octet of the information field shall be used for this purpose. As such, bit 8 serves as a break send sequence number, N(SB), in BRK message while it serves as a break receive sequence number, N(RB), in BRKACK messages.

8.13.2.2 Send state variable V(SB)

The error-correcting entity shall maintain the break send state variable V(SB). V(SB) denotes the value of N(SB) in the next BRK message sent as a result of receiving an L-SIGNAL request primitive from the control function. V(SB) is complemented each time a transmitted BRK message is correctly acknowledged by a BRKACK message. Initially, when the physical connection has been established, V(SB) is set to zero.

8.13.2.3 Receive state variable V(RB)

The error-correcting entity shall maintain the break receive state variable V(RB). V(RB) denotes the expected value of N(SB) in the next BRK message to be received. If N(SB) in the next received BRK message is equal to V(RB), then V(RB) shall be complemented prior to sending the BRKACK message. Initially, when the physical connection has been established, V(RB) is set to zero.

8.13.3 Break procedures

8.13.3.1 Transmitting a BRK message

On receipt of an L-SIGNAL request primitive, the error-correcting entity shall transmit a BRK message in a UI command frame with its P bit set to 0. The error-correcting entity shall set N(SB) to the current value of V(SB), start the acknowledgement timer T401 (see 9.2.1) and set the retransmission counter N400 (see 9.2.2) to zero.

8.13.3.2 Receiving a BRK message

When receiving a BRK message in a UI command frame, the error-correcting entity shall check whether N(SB) is equal to the current value of V(RB). If it is, the error-correcting entity shall issue an L-SIGNAL indication primitive to the control function, passing it the break-handling option and, if present, the length of break information. The error-correcting entity shall also complement the value of V(RB).

Upon receipt of an L-SIGNAL response primitive, the error-correcting entity shall transmit a BRKACK message in a UI response frame with N(RB) equal to the value of V(RB). The F bit of the UI response frame shall be set to the same binary value as the received UI command frame.

If N(SB) in the received BRK message is not equal to V(RB), then the error-correcting entity shall discard the BRK message and retransmit the previous BRKACK message with N(RB) equal to the current value of V(RB). No L-SIGNAL indication primitive shall be issued to the control function.

8.13.3.3 Receiving a BRKACK message

When receiving a BRKACK message in a UI response frame, the error-correcting entity shall check whether N(RB) is equal to V(SB) + 1. If it is, the error-correcting entity shall complement V(SB), stop the acknowledgement timer T401, and issue an L-SIGNAL confirmation primitive to the control function. If N(RB) is not equal to V(SB) + 1, the error-correcting entity shall ignore the BRKACK message.

8.13.3.4 Expiration of the acknowledgement timer

If T401 expires before a BRKACK message is received to acknowledge the last BRK message transmitted, the error-correcting entity shall retransmit the BRK message with N(SB) equal to the current value of V(SB). No more than N400 retransmissions shall occur. Failure to receive a BRKACK after N400 retransmissions shall be reported to the control function.

9 System parameters

This clause specifies the parameters needed for proper operation. For each parameter, it indicates:

- a) whether the parameter is used by the control function or the error control function;
- b) the definition of the parameter;
- c) whether information about the parameter is carried in XID frames and, if so, whether the information is for negotiation or indication purposes;
- d) for those parameters that are negotiated by XID frames, what the negotiation rules are; and
- e) what the default value of the parameter is.

9.1 Parameters of the control function

9.1.1 Detection phase timer (T400)

The detection phase timer governs the amount of time that a control function in an originating or answering DCE waits for the ADP or the ODP, respectively (see 7.2.1). Information about this timer is *not* carried in XID frames. The default value shall be 750 ms. (This is the estimated maximum propagation delay of all required transmissions including a single satellite link, plus sufficient time for the required transmissions at the data rate used in any V-series modem that uses asynchronous-to-synchronous conversion.)

NOTE – Implementations may provide a mechanism for the user to set a value different from the default.

9.2 Parameters of the error control function

9.2.1 Acknowledgement timer (T401)

The acknowledgement timer governs the amount of time that an error-correcting entity will wait for an acknowledgement before resorting to other action (e.g. transmitting a frame). Information about this timer is *not* carried in XID frames. The two error-correcting entities associated with an error-corrected connection may operate with a different value of T401.

NOTE – This timer should be regarded as a logical parameter. That is, there can be one acknowledgement timer associated with each LAPM function (e.g. transmitting an I frame, transmitting a BRK message) that requires an acknowledgement to be received before expiration of this timer. This does not necessarily imply separate timer circuits.

Appendix IV shows the various factors that influence T401.

9.2.2 Maximum number of retransmissions (N400)

N400 governs the maximum number of times that an error-correcting entity will re-attempt a procedure requiring a response. Information about this counter is *not* carried in XID frames. The two error-correcting entities associated with an error-corrected connection may operate with a different value of N400. While no default value is specified for N400, it shall have a minimum value of 1.

9.2.3 Maximum number of octets in an information field (N401)

N401 governs the maximum number of octets that can be carried in the information field of an I frame, an SREJ frame, an XID frame, a UI frame, or a TEST frame transmitted by an error-correcting entity. The default value of N401 shall be 128 octets for both directions of data transmission. If the default is not satisfactory to the negotiation initiator, then a different value may be negotiated separately for each direction by use of the XID frame. The initiator of the negotiation shall indicate the N401 value it wishes to use for each direction (absence of a value indicates use of the default). The responder to the negotiation indicates the N401 value it wishes to use for each direction. The value chosen by the responder shall be between the value chosen by the initiator and

the default value, inclusive, and shall be the value used during the operation of the error-corrected connection (unless overridden by a subsequent negotiation).

9.2.4 Window size (k)

k governs the maximum number of I frames that an error-correcting entity can have outstanding (i.e. unacknowledged). The default value of k shall be 15 for both directions of data transmission. If the default is not satisfactory to the negotiation initiator, then a different value may be negotiated separately for each direction by use of the XID frame. The initiator of the negotiation shall indicate the k value it wishes to use for each direction (absence of a value indicates use of the default). The responder to the negotiation indicates the k value it wishes to use for each direction. The value chosen by the responder shall be between the value chosen by the initiator and the default value, inclusive, and shall be the value used during the operation of the error-corrected connection (unless overridden by a subsequent negotiation).

9.2.5 Reply delay timer (T402) – Optional

T402 is the maximum amount of time the error-correcting entity may wait, following receipt of any frame requiring a reply, before it initiates transmission of an appropriate reply in order to ensure that the reply frame is received by the remote error-correcting entity prior to expiration of the remote error-correcting entity's T401 timer. Information about this timer is *not* carried in XID frames. If this timer expires, then the reply that would have been returned prior to its expiration shall not be sent.

NOTE – The necessity for an operation of such a timer remains for further study.

9.2.6 Inactivity timer (T403) – Optional

T403 represents the maximum amount of time an error-correcting entity will allow to elapse without frames being exchanged on the error-corrected connection. Information about this timer is *not* carried in XID frames. The two error-correcting entities associated with an error-corrected connection may operate with a different value of T403. While no default value is specified for T403, it should take on relatively small values so that faults can be detected early.

9.2.7 DLCI values

The DLCI value in the address field of a frame transmitted by the error control function serves to identify the connection between two peer error-correcting entities. Information about these values is not carried in XID frames. DLCI values are defined in Table 10.

Table 10/V.42 – Allocation of DLCI values

DLCI value	Used for
0	DTE-to-DTE (V.24 interfaces) data
1-31	Reserved for future use by this Recommendation
32-62	Not reserved for use by this Recommendation
63	Reserved for control-function to control-function information (for further study)
NOTE – The DLCI assignments above are for use with an address field consisting of a single octet (see 8.2.1). Allocation of DLCI values that make use of optional octet 2A (see Figure 8) is for further study.	

9.3 Other parameters

Other parameters for use in conjunction with this Recommendation are defined in ITU-T Rec. V.42 *bis*.

10 Negotiation of optional procedures

Within the scope of this Recommendation, there are four procedures that are optional for error control function operation. These are:

- a) selective retransmission, using an SREJ frame to request retransmission of only a single frame;
- b) loop-back test, where a control function can determine whether its peer is operational;
- c) extended FCS, where a 32-bit FCS (rather than a 16-bit FCS) is used;
- d) selective retransmission, using an SREJ frame to request transmission of multiple frames with span list encoding.

Furthermore, an optional data compression procedure, as defined in ITU-T Rec. V.42 *bis*, may be used in conjunction with the LAPM procedures.

Use of any optional procedure requires agreement by both control functions using the mechanisms in 8.10. The negotiation-initiator can choose whether to request use of a particular procedure. The procedure is used only if the negotiation-initiator requests its use and the responder agrees to its use.

For selective retransmission purposes, the negotiator-initiator may propose either or both of a) and d) options. The responder may choose not to use selective retransmission (i.e. use REJ); alternatively, if it wants to use selective retransmission, it shall choose only one of the options a) or d).

11 Control function-to-control function connection

An error-corrected connection, with a DLCI value of 63, has been reserved for use as a control function-to-control function connection. The protocol used between two control functions is for further study.

12 Encoding of information fields

12.1 Information fields in I frames

The encoding of the information field of I frames is determined by the use of the error-corrected connection (e.g. when used to carry data received from the V.24 interface).

12.2 Information fields in XID frames

12.2.1 General

The general structure of the information field of an XID frame is based on the encoding in ISO/IEC 8885, including Addendum 3, and is shown in Figure 11 below. The information field is composed of a number of subfields. These subfields are a format identifier subfield, zero or more data link layer subfields and, possibly, a user data subfield.

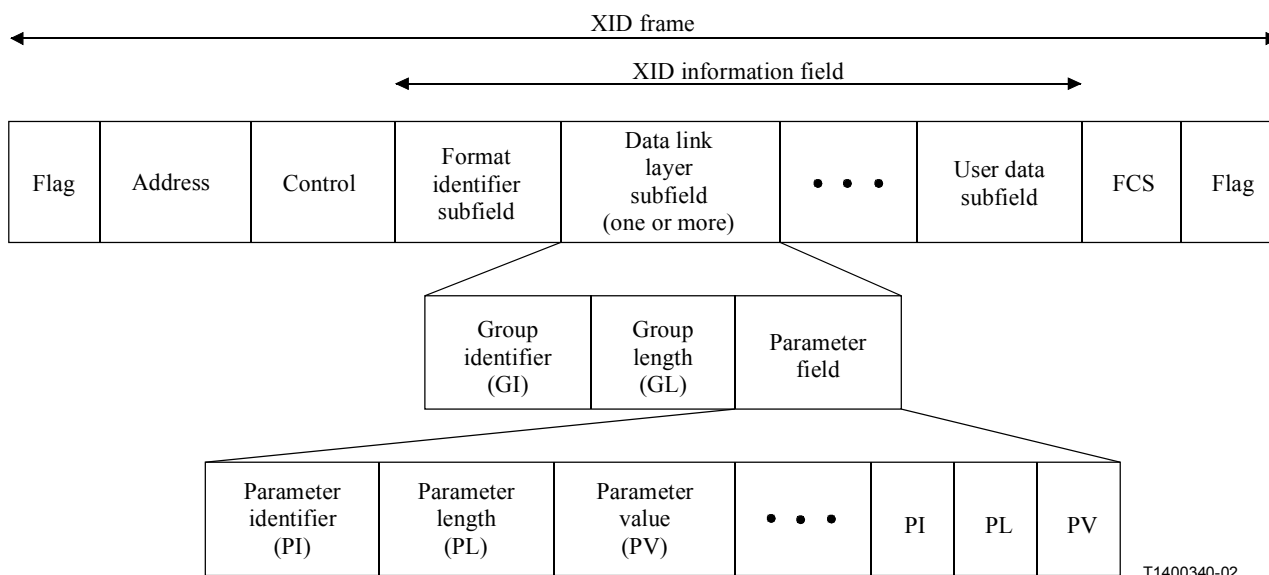


Figure 11/V.42 – General format of XID information field

When an octet encoding is shown for any of the subfields, it is shown with the right-most bit being the low-order bit and the bit transmitted first.

12.2.1.1 Format identifier subfield

Format Identifier (FI) subfield is one octet in length and is the first octet of the information field of the XID frame. In general, the FI is encoded such that it can designate 128 different formats standardized by ISO and 128 different formats defined by users. Each ISO-standardized format is associated with a different FI value. The only such format defined at this time is the "general purpose" format.

12.2.1.2 Data link layer subfields

Data link layer subfields are used to specify various data link layer characteristics, such as operational parameters. In terms of Figure 11, a data link layer subfield consists of a Group Identifier (GI) one octet in length, a Group Length (GL) two octets in length, and a parameter field (whose length is given by GL). The parameter field, in turn, is similarly decomposed into one or more sets of a Parameter Identifier (PI), a Parameter Length (PL), and a Parameter Value (PV) (the parameter length, however, is only one octet in length).

The data link layer subfields, if present, follow in ascending order according to their GI values.

12.2.1.3 User data subfield

A GI has been defined to specify a user data subfield used in conjunction with the "general purpose" FI. This subfield, which follows all data link layer subfields as Figure 11 shows, does not contain a GL. The subsequent information is bounded by the frame's FCS field.

For the purposes of this Recommendation, this subfield is also divided into sets of PIs, PLs, and PVs.

12.2.2 Encoding for negotiation/indication of parameter values and optional procedures

The information field shall be encoded as specified below. Fields that are not recognized are ignored.

Format identifier subfield

For negotiation/indication of parameter values and optional procedures, the FI subfield shall be encoded as "10000010" to indicate the ISO-standardized "general purpose" FI.

Data link layer subfields

Only two of the data link layer subfields specified in ISO/IEC 8885 shall be used in conjunction with this Recommendation. These are:

- a) the "parameter negotiation" subfield (this subfield has a GI value of "10000000"); and
- b) the "private parameter negotiation" subfield (this subfield has a GI value of "11110000").

The length of these subfields (GL) is dependent on the actual information to be transmitted.

Each item to be negotiated and/or indicated is identified by a PI. Table 11 shows each item, its PI value, and with which data link layer subfield it is associated.

**Table 11a/V.42 – Parameter/procedures
associated with the "parameter negotiation" subfield**

PI		Parameter/procedure	Units
Decimal	Binary		
3	00000011	HDLC optional functions	(Note 1)
5	00000101	Maximum length of information field (N401): transmit direction (Note 2)	bits (Notes 3 and 4)
6	00000110	Maximum length of information field (N401): receive direction (Note 2)	bits (Notes 3 and 4)
7	00000111	Window size (<i>k</i>): transmit direction (Note 2)	frames (Note 4)
8	00001000	Window size (<i>k</i>): receive direction (Note 2)	frames (Note 4)
NOTE 1 – The length of this item is 4 octets (i.e. PL = 4). The bits in these octets constitute a 32-bit mask, each for a particular HDLC optional function. Bit 1 of this mask is the low-order bit of octet 1 and is transmitted first; bit 9 is the low-order bit of octet 2, etc. The bits corresponding to the optional procedures used within this Recommendation are as follows: – 3A Selective retransmission procedure (SREJ frame) single I frame request; – 14 Loop-back test procedure (TEST frame); – 17 Extended FCS procedure (32-bit FCS); – 24 Selective retransmission procedure (SREJ frame) multiple I frame request with span list capability. A bit position set to 1 indicates request/agreement to use the procedure. A bit position set to 0 indicates no request/no agreement to use the procedure. For conformance with the encoding rules in ISO/IEC 8885, the transmitter of an XID command frame shall set bit positions 2, 4, 8, 9, 12 and 16 to 1. The transmitter of an XID response frame shall also set these bit positions to 1, except bit position 16 shall be set to 0 if bit position 17 is set to 1. A receiver of these frames should ignore these bit positions. NOTE 2 – Transmit and receive directions are relative to the negotiation-initiator and responder. Therefore, for example, the negotiation-initiator would use PI = 7 to request a window size to be used for the direction of transmission of data from it to the remote DCE. The negotiation-responder would use PI = 8 to respond to this, indicating the window size to use for the direction from the negotiation-initiator to the negotiation-responder. NOTE 3 – N401 is expressed in octets. However, for negotiation purposes, units of "bits" shall be used. NOTE 4 – Parameter values for these items shall be encoded in binary. Within an octet, the first bit transmitted shall be the lowest-order bit. Where multiple octets are needed to express a parameter value, the first octet transmitted shall contain the higher-order bits.			

**Table 11b/V.42 – Parameter/procedures
associated with the "private parameter negotiation" subfield**

PI		PL	Parameter	Note(s)
Decimal	Binary			
0	00000000	3	Parameter set identification	2
1	00000001	1	V.42 <i>bis</i> : Data compression request (P0)	3
2	00000010	2	V.42 <i>bis</i> : Number of codewords (P1)	1, 3
3	00000011	1	V.42 <i>bis</i> : Maximum string length (P2)	1, 3
NOTE 1 – Parameter values for these items shall be encoded in binary. Within an octet, the first bit transmitted shall be the lowest-order bit. Where multiple octets are needed to express a parameter value, the first octet transmitted shall contain the higher-order bits. NOTE 2 – This parameter shall always be the first parameter present in the "private parameter negotiation" subfield. Its PV value shall be the octets "00101010", "00110100", "00110010" (for "V.42"). NOTE 3 – Parameters P0, P1 and P2 operate together to specify whether V.42 <i>bis</i> data compression will be used and, if so, to specify the parameters associated with the procedure. During the protocol establishment phase, the presence of P0 shall indicate a request for data compression for the direction(s) indicated. Following the protocol establishment phase, absence of a parameter shall indicate that its previously negotiated value shall remain unchanged. For P0, its PV value indicates the direction for which data compression is requested; PV is encoded as "000000nn" where nn indicates: – 00 Compression in neither direction (default); – 01 Negotiation initiator-responder direction only; – 10 Negotiation responder-initiator direction only; – 11 Both directions. NOTE 4 – The value of PL (i.e. the length of the PV field), where not explicitly stated, shall be the smallest number of octets needed to express the value of the parameter.				

**Table 11c/V.42 – Parameter/procedures
associated with the user data subfield**

PI		PL	Parameter	Note(s)
Decimal	Binary			
64	01000000	3	ITU-T Rec. V.44 – Parameter Set Identifier	1, 2
65	01000001	1	ITU-T Rec. V.44 capability (C_0)	1, 3
66	01000010	1	ITU-T Rec. V.44 – Data Compression request (P_0)	1, 4
67	01000011	2	ITU-T Rec. V.44 – Number of codewords for transmit direction (P_{1T})	1
68	01000100	2	ITU-T Rec. V.44 – Number of codewords receive direction (P_{1R})	1
69	01000101	1	ITU-T Rec. V.44 – Maximum string length for transmit direction (P_{2T})	1
70	01000110	1	ITU-T Rec. V.44 – Maximum string length for receive direction (P_{2R})	1
71	01000111	2	ITU-T Rec. V.44 – Length of history for transmit direction (P_{3T})	1
72	01001000	2	ITU-T Rec. V.44 – Length of history for receive direction (P_{3R})	1
255	11111111	1	Manufacturer-ID	5

NOTE 1 – Parameters C_0 , P_0 , P_{1T} , P_{1R} , P_{2T} , P_{2R} , P_{3T} and P_{3R} operate together to specify whether V.44 data compression will be used and, if so, to specify the parameters associated with the procedure.

NOTE 2 – The parameter set identifier PV value shall be the octets "00101010", "00110100", "00110100" (for "V.44").

NOTE 3 – The capability parameter indicates if parameter negotiation after link establishment is supported; PV is encoded as "xx00000n" where 'xx' is ignored and n indicates:

- 0 Parameter negotiation after link establishment not supported;
- 1 Parameter negotiation after link establishment supported.

NOTE 4 – The data compression request parameter indicates the direction for which data compression is requested; PV is encoded as "000000nn" where nn indicates:

- 00 Compression in neither direction (default);
- 01 Negotiation initiator-responder direction only;
- 10 Negotiation responder-initiator direction only;
- 11 Both directions.

NOTE 5 – This parameter shall be identified by a PI value of "11111111". The encoding of the associated PV subfield is manufacturer-specific. The high-order bit of the first octet of the PV field is used as follows:

- bit = 0 Manufacturer IDs not assigned by ITU-T;
- bit = 1 ITU-T-assigned manufacturer IDs (the assignment of these identifiers is for further study).

When receiving a manufacturer ID that is not recognized, the manufacturer ID field is ignored.

User data subfield

The user data subfield may be present independently of whether negotiation and/or indication is performed. This subfield has a GI value of "11111111". Parameters defined within this subfield are used to communicate the manufacturer ID and negotiate use of V44 data compression. Table 11c shows all parameters and associated PV values.

12.3 Information fields in UI frames

In the encodings below, bit 1 is the low-order bit and is transmitted first.

The first octet of the information field of a UI frame shall be encoded to indicate the usage of the field, as given in Table 12.

Table 12/V.42 – Encoding of octet 1 of the information field in a UI frame

Message type	Bits							
	8	7	6	5	4	3	2	1
BRK	X	1	0	0	0	0	0	0
BRKACK	X	1	1	0	0	0	0	0
NOTE 1 – Encodings not shown in the table are reserved.								
NOTE 2 – The value of X is set as discussed below.								

12.3.1 Encoding of BRK message

The encoding of a BRK message is shown in Figure 12. Bit 8 of octet 1 is used as a sequence number, modulo 2 (see 8.13.2.1).

Break-handling option

The break-handling option is encoded as "DS", where:

- the "D" bit (bit 8 of octet 2) shall indicate whether data previously accumulated but not yet delivered should be discarded:
D = 0 indicates no discarding of data
D = 1 indicates discarding of data
- the "S" bit (bit 7 of octet 2) shall indicate whether the break should be delivered in sequence:
S = 0 indicates that the break shall be delivered in sequence with respect to data generated before the break
S = 1 indicates that the break shall precede all data previously received but not yet delivered.

Break length

The break length, which is optional, is binary-encoded in octet 3 in units of 10 ms where bit 1 is the low-order bit. The value of "11111111" shall be used to indicate a break longer than 2.54 seconds. Absence of a break length field, or a value of zero in the break length field, in a received BRK message shall be interpreted as a break of default length.

8	7	6	5	4	3	2	1	Octet
X	1	0	0	0	0	0	0	1
Break handling option			Reserved					2
Break length								3

Figure 12/V.42 – Format of UI information field for break

12.3.2 Encoding of BRKACK message

A BRKACK message contains only one octet. Bit 8 of octet 1 is used as a sequence number, modulo 2 (see 8.13.2.1).

12.4 Information fields in TEST frame

The information field in a TEST frame is used by the control function as part of a loop-back test. While specification of a particular encoding of this field is outside the scope of this Recommendation, the control function should ensure that the field is unique so that it can determine when a test has completed successfully.

12.5 Information fields in SREJ frames

When the optional m-SREJ procedure is used, the SREJ frame may contain an information field. In this case, the information field is encoded as given in 8.2.4.8.2 and Figure 9.

Annex A

Operation of the error control function – Alternative procedure

Note that Annex A and Appendix V were deleted from ITU-T Rec. V.42 in the 2002 revision. The remaining annex and appendices have not been renumbered.

Annex B

Mapping of character formats to 8-bit format

This annex presents the mapping for converting between character formats used on the DTE/DCE interface and those used on the control function/error control function interface. Only support of the 10-bit DTE-to-DCE format is mandatory; support of the other formats shown here is optional. Character formats other than those listed below are not supported.

DTE/DCE: Total bits per character	Specific formats of octets supported	Control function to error control function formatting of octets
11	Start/8 data/2 stop Start/8 data/parity/stop	8 data (parity or second stop bit is independently generated on each DTE/DCE interface)
10	Start/8 data/stop	8 data
	Start/7 data/2 stop	7 data plus 0-bit pad in high-order bit
	Start/7 data/parity/stop	7 data plus parity as high-order bit
9	Start/7 data/stop	7 data plus 0-bit pad in high-order bit
	Start/6 data/2 stop	6 data plus two 0-bit pads in two highest-order bits
	Start/6 data/parity/stop	6 data plus parity in next-to-high-order bit plus 0-bit pad in high-order bit
8	Start/6 data/stop	6 data plus 0-bit pad in two highest-order bits
	Start/5 data/2 stop	5 data plus three 0-bit pads in three highest-order bits
	Start/5 data/parity/stop	5 data plus parity in third highest-order bit plus two 0-bit pads in two highest-order bits

Appendix I

Interworking with a non-error correcting DCE

This appendix presents some considerations for interworking between an error-correcting DCE and a non-error-correcting DCE.

I.1 Interworking with a non-error-correcting answerer

A non-error-correcting answering DCE will pass the ODP through to its attached DTE. When passed through the asynchronous-to-synchronous converter of a DCE, the ODP produces a bit sequence that is interpreted by a large majority of DTEs as a series of IA5 characters of alternating parity (assuming that the DTE is using the following data format: one start bit, seven data bits, parity, one stop bit). The sequence may interfere with automatic baud rate or character format detection mechanisms of the answerer or cause the inadvertent bypassing of prompts necessary to the establishment of non-error-corrected DTE-to-DTE communications. In this event, it will be necessary for the originator to disconnect, manually disable error correction, and reattempt the call.

I.2 Interworking with a non-error-correcting originator

An error-correcting answerer called by a non-error-correcting originator will send only mark bits, which cause no observable effect at the originating DTE (since mark-idle is the "normal" state for an asynchronous DTE). After the detection phase timeout period, the error-correcting answerer will revert to non-error-correcting-DCE operation (i.e. non-error-correcting mode).

I.3 Disposition of unrecognized bits

If the detection phase is successful (i.e. the error-control DCEs each recognize the error-control capabilities of the other and move into the protocol establishment phase), none of the bits received during the detection phase (i.e. the ODP and the ADP) are delivered to the DTE.

If the detection phase fails, an error-correcting DCE reverts to the non-error-correcting-DCE operation. While the bits received during the failed detection phase were of no value to the error control function, they may indeed have been of value to the DTEs, since the non-error-control DCE will have already given its attached DTE the go-ahead to begin transmitting. There are several possible options for handling these bits, as discussed below; other possibilities also exist.

- a) The error-correcting DCE may discard the bits received during the detection phase timeout period. This disposition is the minimal implementation. If the DTE attached to the non-error-correcting DCE did transmit data during the timeout period, it would be necessary, in this case, for the transmission to be repeated if, indeed, the fact that the bits were discarded is recognizable (perhaps because the transmission was meant to evoke some type of response, which fails to materialize).
- b) The error-correcting DCE could buffer bits received during the detection phase and, upon termination of the detection phase, forward all of these bits to the DTE. Because of the possibility of continuous transmission from the other DTE, this optional mode of operation would likely require the implementation of fully-buffered operation (i.e. every character received is held for forwarding after previously-received characters have been forwarded). While the non-error-correcting-DCE Recommendations do not require this mode of operation, the error-correcting DCE Recommendation does require fully-buffered operation anyway (as well as DTE/DCE flow control) because of the possibility of retransmission in the event of errors. Buffered and flow-controlled operation without error control could thus be considered a recognized subset of the error-correcting Recommendation that manufacturers could choose to implement and make available to users. This not only overcomes possible lost data during the detection phase, but also supports a constant-speed DTE/DCE interface during non-error-correcting operation. This Recommendation does not require this mode of operation to be available, however.

Appendix II

Data forwarding conditions

The control function is responsible for determining when to initiate data transfer for the purpose of transmitting the data received on the V.24 interface to the remote DCE. While it is beyond the scope of this Recommendation to specify when the control function initiates data transfer, several data-forwarding criteria are possible. These include the following:

- a) *Data forwarding character* (this corresponds to parameter 3 of ITU-T Rec. X.3) – The control function may trigger transmission of data received based on reception across the V.24 interface of a pre-designated character or character sequence.

- b) *Idle timer* (this corresponds to parameter 4 of ITU-T Rec. X.3) – With this method, the control function starts a timer whenever a new character is received across the V.24 interface. If a predetermined period passes without receipt of a further character, the control function instructs its error control function to transmit the accumulated characters.
- c) *Interval timer* – With this method, the control function accumulates characters from the V.24 interface for a period of time. When this time has elapsed, the control function instructs its error control function to transmit the accumulated characters.
- d) *Stream mode* – Upon receipt of a character from the V.24 interface, the control function instructs its error control function to commence transmission of data. As the error control function is transmitting an I frame to carry this data and prior to appending the FCS field to close out the I frame, the control function may provide to the error control function additional characters received from the V.24 interface for inclusion in the I frame.
- e) *Block mode* – The control function may accumulate a predetermined number of characters before requesting their transmission by the error control function.

Other data-forwarding criteria may also be used by the control function. The control function may use several methods at the same time.

Appendix III

Additional information for V.42 implementers regarding robustness of operation

Certain procedures, techniques, parameter values, and behaviours may be included in implementations of the detection phase and the LAPM protocol, which may improve the performance of the detection phase and LAPM under some channel conditions (e.g. high bit error rates). Implementation of these procedures, etc., is not required for compliance with this Recommendation, but is permitted by this Recommendation. If the procedures are implemented, there will be no adverse impact on interoperability with DCEs which do not implement the procedures.

This informative appendix indicates the places in the text of this Recommendation where these procedures are referenced, described or permitted, and the potential benefits that may be gained by their implementation. The information contained in this appendix is not exhaustive, and is not intended to preclude other improvements which may be possible.

III.1 Transmission of the answerer detection pattern

Clause 7.2.1.3 requires the answerer to transmit the answerer detection pattern "at least ten times". Since the originator detection pattern has been received, the answerer possesses a high degree of confidence that the originator is indeed capable of LAPM operation; in this case, it would be advisable to transmit the ADP much more than ten times, possibly until flags are received from the originator. This will increase the opportunity for recovery from the event that no two consecutive patterns of the first ten ADPs are received correctly, thereby increasing the probability of successful connection establishment.

III.2 Value of parameter N400 (maximum number of retransmissions)

Clause 9.2.2 specifies that N400 shall have a minimum value of 1, but specifies no maximum or recommended value. For increase robustness under adverse channel conditions, this parameter should be set to a relatively large value (e.g. 16), such that repeated attempts of a procedure requiring a response shall be made over a span of several seconds (depending upon the data signalling rate).

In particular, it should be noted that after successful completion of the detection phase (see 7.2.1) that the originator possesses a high degree of confidence that the answerer is indeed capable of LAPM operation. In this case, it would be advisable to use a high value of N400 during the protocol establishment phase in order to increase the probability of successful connection establishment. However, if the detection phase is omitted, the value of N400 may need to be small to accommodate fallback operation with non-error-correcting DCEs and with DCEs which support only the alternative protocol.

III.3 Incomplete XID exchange

Clause 8.10.3 specifies that after an XID command frame is sent N400 times without a valid response that "... the error-correcting entity shall notify the control function that the negotiation/indication procedure did not complete." It should be noted that the recipient of the XID command frame may have indeed processed it and transmitted an XID response frame, perhaps multiple times, with the responses being corrupted and discarded; in this event, if the sender of the XID command frame were to continue the connection, the parameters of the two error-correcting entities (and possibly higher-level functions such as V.42 *bis* data compression) may be different, resulting in an ultimate failure of the connection, loss or corruption of user data, or both. It is therefore advisable that, in the event the XID exchange fails, the call be released.

III.4 Selective retransmission

The selective reject (SREJ) command/response is described in 8.2.4.8, 8.4.5, and 8.5.1. When SREJ is implemented in both error-correcting entities and enabled by negotiation (see clauses 10 and 12), it may be used to improve the performance of the LAPM connection under adverse conditions (and when propagation delay is long, such as on satellite circuits). This gain is achieved because, when one or more frames are lost due to line noise, the SREJ procedure requires retransmission of only the lost frame(s), while the normal REJ procedure requires retransmission of the first lost frame and all subsequent frames; SREJ thus improves performance by eliminating the repeated transmission of data which has already been successfully received.

III.5 Reject on detection of errored frames

Clause 8.5.4 permits the recipient of an errored frame, under certain conditions, to immediately issue a REJ frame rather than simply discarding and ignoring the frame. Implementation of this optional provision can decrease the time required to recover from a line error. It may be advisable to issue such an "early REJ" frame only when the errored frame consists of five bytes or more; this will avoid issuing REJ frames when the error was caused by a corrupted flag or supervisory frame.

III.6 Checkpointing

Recovery from loss of the last I frame in a series may be expedited if that I frame is followed by a supervisory command frame (such as RR) with the poll bit set to 1. The short supervisory frame is more likely to be received without error than is the preceding longer I frame, and, with the poll bit set, requires the receiver to respond immediately with an indication of whether or not the preceding I frame was properly received. This technique, known as checkpointing, reduces the dependency on timer recovery of lost I frames and can improve performance under adverse conditions.

Caution should be exercised in frequent invocation of this mechanism so as to avoid degradation of throughput in the reverse direction due to the need for the remote error-correcting entity to insert a supervisory response frame with the final bit set into the reverse data stream upon each such invocation.

Appendix IV

Factors for determining the acknowledgement timer

Several procedures of the error control function utilize an acknowledgement timer (T401) to ensure timely receipt of the acknowledgement from the remote error control function. To ensure receipt of such an acknowledgement before the transmitter's T401 expires, the two communicating error control functions must take into account the following time factors:

- a) the propagation delay involved in transmitting the frame requiring acknowledgement – (T_a);
- b) the time needed for the remote DCE to process the received frame and formulate the acknowledgement – (T_b);
- c) the maximum time allowed to complete transmission of those frames in the remote DCE's "transmit queue" (e.g. a frame already in progress of being transmitted or a frame that cannot be displaced) – (T_c);
- d) the time needed to transmit the acknowledging frame – (T_d);
- e) the propagation delay involved in transmitting the acknowledging frame – (T_e);
- f) the processing time needed by the error control function to recognize the acknowledging frame – (T_f).

Given values for the above time limits, the value of the acknowledgement timer used by the transmitting error control function should then be set as follows:

$$T401 \geq T_a + T_b + T_c + T_d + T_e + T_f$$

Appendix V

Potential enhancements to LAPM protocol

Note that Annex A and Appendix V were deleted from ITU-T Rec. V.42 in the 2002 revision. The remaining annex and appendices have not been renumbered.

Appendix VI

Additional information for V.42 implementers regarding answerer detection patterns

Certain procedures, techniques, and behaviours may be included in implementations of the detection phase of V.42 to indicate alternative capabilities or procedures. Implementation of these procedures, etc., is not required for compliance with this Recommendation, but is permitted by this Recommendation.

This informative appendix indicates the places in the text of this Recommendation where these procedures are referenced, described or permitted, and the potential benefits that may be gained by their implementation. The information contained in this appendix is not exhaustive, and is not intended to preclude other extensions and enhancements which may be possible.

VI.1 Alternative answerer detection patterns

Clause 7.2.1.3 requires the answerer to transmit the answerer detection pattern, ADP, "at least ten times".

Table 3 indicates that the pattern 0 1010 0010 1 11. . .11 0 1100 0010 1 11. . .11 (E) and (C) separated by 8 to 16 ones is to be used as the ADP to indicate support for V.42, the pattern 0 1010 0010 1 11. . .11 0 0000 0000 1 11. . .11 (E) and (Null) separated by 8 to 16 ones to indicate no error correcting protocol and reserves the 'remaining 15-code points', 0 1010 0010 1 11. . .11 0 0000 XXXX 1 11. . .11 for future use.

In actuality, there are more than 15 other patterns.

It has been observed that a proprietary cellular phone modem protocol uses the pattern 0 1010 0010 1 11. . .11 0 1011 0010 1 11. . .11 (E) and (M) separated by 8 to 16 ones sent 5 or more times followed by the (E) and (C) pattern 10 or more times to indicate support for those cellular procedures as well as support for V.42. This pattern, EM, is not one of the previously reserved patterns.

With the addition of V.44 compression algorithm which uses the previously reserved User Data Subfield of the V.42 XID, the previously reserved pattern, 0 1010 0010 1 11. . .11 0 0000 1010 1 11. . .11 (E) and (P) separated by 8 to 16 ones may be sent 16 times followed by the (E) and (C) pattern 10 or more times to indicate that V.42 is supported and that the User Data Subfield may be extended to contain both V.44 parameters and manufacturer-specific fields.

VI.2 Skipping of originator/answerer detection patterns

ITU-T Rec. V.8 provides a method for bypassing the detection phase of V.42. Many answering modems enter the detection phase regardless of the V.8 protocol octet setting in order to detect alternative protocols.

NOTE – Clause 9.3.1/V.9.2 requires that both the originating and answering modems skip the V.42 detection phase if they both indicate that V.42 is supported in the V.8 protocol octet or in the V.92 short phase 1 signals.

SERIES OF ITU-T RECOMMENDATIONS

Series A	Organization of the work of ITU-T
Series B	Means of expression: definitions, symbols, classification
Series C	General telecommunication statistics
Series D	General tariff principles
Series E	Overall network operation, telephone service, service operation and human factors
Series F	Non-telephone telecommunication services
Series G	Transmission systems and media, digital systems and networks
Series H	Audiovisual and multimedia systems
Series I	Integrated services digital network
Series J	Cable networks and transmission of television, sound programme and other multimedia signals
Series K	Protection against interference
Series L	Construction, installation and protection of cables and other elements of outside plant
Series M	TMN and network maintenance: international transmission systems, telephone circuits, telegraphy, facsimile and leased circuits
Series N	Maintenance: international sound programme and television transmission circuits
Series O	Specifications of measuring equipment
Series P	Telephone transmission quality, telephone installations, local line networks
Series Q	Switching and signalling
Series R	Telegraph transmission
Series S	Telegraph services terminal equipment
Series T	Terminals for telematic services
Series U	Telegraph switching
Series V	Data communication over the telephone network
Series X	Data networks and open system communications
Series Y	Global information infrastructure and Internet protocol aspects
Series Z	Languages and general software aspects for telecommunication systems